

# AOPOS

## AS290/AS260 Cordless Barcode Scanner User Manual



Version: AS290/AS260\_UM\_EN\_V1.2.7

## Notice

Make sure you carefully read the following information to ensure that your barcode scanner is able to perform at the level for which it is designed.

1. All software, including firmware, furnished to the user is on a licensed basis.
2. The right is reserved to make changes to any software or product to improve reliability, function, or design.
3. The material in this manual is subject to change without notice.
4. The manufacturer assumes no responsibility for any loss or claims by third parties which may arise from the use of this manual.
5. A standard kit contains: a handheld unit, a cradle (with USB, or RS-232, or PS2 cable), an antenna, a 5V AC/DC adaptor (for battery charge) and a CD-ROM (containing software and electrical manuals).
6. Do not throw or drop the scanner or otherwise subject it to strong impact, which can damage the scanner, interrupt program execution, corrupt memory contents, or otherwise interfere with proper operation.
7. Use a blunt object to operate the stroke keys. Use of a sharp pointed object can damage stroke keys and cause shorting of internal circuitry.
8. Never try to remove the battery from the scanner.
9. Sudden temperature changes can cause condensation to form on the scanner's case. Operating the scanner while condensation is present can interfere with proper operation. Take care to avoid conditions that cause the formation of condensation. If condensation does form, wait until it dries completely before using the scanner.
10. The scanner offers two kinds of wireless network topology: point coordination and distributed coordination. The default setting of wireless network topology is point coordination. To change the wireless network topology, you must change the setting of both handheld unit and cradle.
11. The scanners within same working area must apply the same wireless network topology.
12. When the point coordination wireless network topology is used, if multi-clusters are working in the same area, then each cluster must use a different radio frequency channel. Both of the handheld unit and cradle must be configured individually.
13. When the distributed coordination wireless network topology is used, if multi-clusters are working in the same area, it is strongly recommended that different radio frequency channel numbers are applied to different clusters. While setting up, only the radio frequency channel number of the first handheld unit of a single cluster is required to be set. When the first handheld unit binds to the cradle, the cradle will automatically obtain the radio frequency channel number of the handheld unit. The consecutive joined handheld units will automatically obtain the radio frequency channel number of the cradle.
14. In order to obtain constantly good communication quality, when in multi-clusters working mode, the physical space between two cradles is required to be at least 2 meters.
15. In order to obtain constantly good communication quality, it is recommended to place the cradle on

a higher location, generally more than 1 meter above the ground. If working outdoor, the higher location the better.

## Safety precautions – Danger!

Be sure to read the following safety precautions carefully before trying to use the barcode scanner for the first time. Keep this manual in handy place for future reference.



### **Danger!**

This symbol indicates information that, if ignored or applied incorrectly, creates the danger of death or serious personal injury.

---



### **Lithium-ion battery**

- Never allow the battery to become wet. Water can create the danger of battery heat emission, explosion, and fire.
- Never use or leave the battery next to open flame, near a stove, or any other area exposed to high heat. Doing so creates the danger of battery heat emission, explosion, and fire.
- Never use the battery with any device other than this unit. Doing so can create the danger of battery heat emission, explosion, and fire.
- Note that the battery's positive (+) and negative (-) terminals must be oriented correctly when it is loaded into the Barcode Scanner. Connecting the battery with its terminals reversed creates the danger of battery fluid leakage, heat emission, explosion, and fire.
- Never dispose of the battery by incinerating it or otherwise expose it to heat. Doing so creates the danger of battery heat emission, explosion, and fire.
- Never allow the positive (+) and negative (-) terminals of the battery to become connected (shorted) by metal. Doing so creates the danger of battery heat emission, explosion, and fire.
- Never transport or store the battery together with a necklace, hair pins or other metal objects. Doing so can short battery terminals, and create the danger of battery heat emission, explosion and fire. Be sure to place the battery in its case whenever transporting or storing it.
- Never throw the battery or otherwise subject it to strong impact. Doing so creates the danger of battery heat emission, explosion, and fire.
- Never pierce the battery with nails, hit it with a hammer, or step on it. Doing so can create the danger of battery heat emission, explosion, and fire.
- Never try to take apart the battery in any way. Doing so creates the danger of battery heat emission, explosion, and fire.
- Use only the specified charger to charge the battery. Use of other types of charger creates the danger of battery heat emission explosion, and fire.

## Safety precautions – Warning!



### Warning!

This symbol indicates information that, if ignored or applied incorrectly, can create the possibility of death or serious personal injury.

---

#### **Disassembly and modification**

Never try to disassemble or modify the unit in any way. High voltage inside creates the danger of electrical shock.

---

#### **Interior parts and components**

Never touch interior high-voltage parts or components. Doing so creates the danger of electrical shock.

---

#### **Abnormal conditions**

Should the unit become hot or start to emit smoke or a strange odor, immediately turn off the power and contact your original dealer. Continued use creates the danger of fire and electrical shock.

---

#### **Foreign objects**

Should any foreign matter ever get into the unit, immediately turn off the power and contact your original dealer. Continued use creates the danger of fire and electrical shock.

---

#### **Dropping and damage**

Should you drop the unit and damage it, immediately turn off the power and contact your original dealer. Continued use creates the danger of fire and electrical shock.

---

#### **Laser beam**

Never look directly into the laser beam. Doing so can cause serious eye damage.

---

#### **Lithium-ion battery**

- Do not put a battery in microwave ovens or pressure cookers. Doing so may cause the battery to overheat, explode or burst into flames.
- Do not use a battery that smells strange, is overheating, is a strange color, or is a strange shape. Doing so may cause the battery to overheat, explode or burst into flames.
- If the amount of time period the battery can serve becomes considerably short, stop using it. It may indicate the possibility of a malfunction in the battery. Continued charging the battery creates the danger of heat emission, explosion, and fire.
- Stop charging the battery after the recommended time even if it is not fully charged. Continuing to charge the battery may cause the battery to over heat, explode or burst into flames.
- If the battery leaks fluid or emits a strange smell, remove it from near heat or flames. Burning may cause the battery to explode or burst into flames.

Should fluid from the battery accidentally get into your eyes, do not rub them. Immediately rinse your eyes with clean water such as tap water and then consult a physician immediately.

---

---

### **Cradle with RS-232 cable and adaptor**

- Power the cradle only with a power outlet whose voltage matches that marked on the adaptor specified in this manual.
  - Avoid conditions that can cause damage or breaks in the power cord. Do not place heavy objects on the power cord. Keep it away from sources of heat. Any of these conditions can damage the power cord, creating the danger of fire and electrical shock.
  - Never modify, sharply bend, twist, or pull on the power cord. Doing so creates the danger of fire and electrical shock.
  - Use only the AC/DC adaptor and charger specified in this manual. Use of other AC/DC adaptor models or chargers creates the danger of fire and electrical shock.
  - Should the power cord ever become severely damaged, contact your original dealer. Use of a damaged electrical cord creates the danger of fire and electrical shock.
- 

### **Moisture**

Keep the Basic Unit and the Barcode Scanner away from vases, planters, cups, glasses and other containers of liquid. Also keep it away from metal. Water and metal getting into the unit creates the danger of fire and electrical shock.

## Safety precautions – Caution!



### Caution!

This symbol indicates information that, if ignored or applied incorrectly, can create the possibility of personal injury or material damage.

---

#### **Foreign objects**

Take care to ensure that metal or combustible objects are not inserted into the openings of the unit. Such objects create the danger of fire and electrical shock.

---

#### **Location**

- Do not locate the unit on a surface that is unstable or uneven. Doing so creates the danger of the unit falling, which can cause personal injury.
  - Do not locate the unit in an area subjected to large amounts of humidity or dust. Doing so creates the danger of fire and electrical shock.
  - Do not leave the unit for long periods in a car parked in direct sunlight.
- 

#### **Heavy objects**

Never place heavy objects on top of the unit. Doing so creates the risk of a loss of balance and the object falling, which can cause personal injury.

---

#### **Exit window**

- Never apply strong pressure to the mirror or subject it to strong impact. Doing so can crack the mirror and create the danger of personal injury.
  - Should the mirror ever break, never touch the mirror broken. Doing so can cause personal injury.
- 

#### **Lithium-ion battery**

- Never leave the battery in an area expose to direct sunlight, in a car parked in direct sunlight, or any other very hot area. Doing so creates the danger of heat emission and fire, as well as deterioration of battery performance and shortening of its service life.
  - Do not use the battery in areas where static electricity is being generated. Doing so creates the danger of battery heat emission, explosion, and fire.
  - Temperature ranges for battery use, charging and storage are specified below. Temperatures outside these ranges create the danger of deterioration of battery performance and shortening of its service life as well as fluid leakage and heat generation.
  - Operating Temperature: -20°C to 60°C.
  - Charging Temperature: 0°C to 45°C.
  - Storage Temperature: -20°C to 45°C.
  - Should fluid from the battery accidentally get onto clothing or your skin, immediately rinse it off with clean tap water. Prolonged contact with battery fluid can cause skin irritation.
  - Keep the battery out of the reach of small children. Do not let small children remove the battery from the charger or the unit it is powering.
- 

#### **Cradle with RS-232 cable and adaptor**

- Keep the power cord away from stoves and other sources of extreme heat. Heat can melt the

---

insulation of the power cord and create the danger of fire and electrical shock.

- Never pull on the power cord when unplugging it. Doing so can damage the cord and create the danger of personal injury, fire and electrical shock. Always hold onto the plug when unplugging it from the wall outlet.
- Never touch the plug while your hands are wet. Doing so can create the danger of electrical shock.
- Be sure to unplug the power cord from the wall outlet before moving the Basic Unit. Failure to do so can result in damage to the power cord caused by pulling it, which creates the danger of fire and electrical shock.
- Be sure to unplug the power cord from the wall outlet before cleaning the Basic Unit and charger.
- Be sure to turn the power off and unplug the power cord after use.
- Unplug the power cord from the wall outlet and clean the area around the plugs at least once a year. If dust collects on the AC/DC adaptor, humidity or moisture may cause a fault in the insulation, which may result in a fire.



# Contents

Notice .....	i
Safety precautions – Danger! .....	iii
Safety precautions – Warning! .....	iv
Safety precautions – Caution! .....	vi
Technical specifications .....	1
Cable connector pin-outs descriptions for cradle .....	3
Default setting for each barcode .....	4
Decode zone .....	5
Dimensions .....	6
Parts of the scanner .....	7
Power on, power off handheld unit and charge battery .....	8
Installation of cradle .....	9
Programming instruction .....	11
Description of point coordination and distributed coordination wireless network .....	12
1. Sketch map of point coordination operating mode .....	12
2. Sketch map of distributed coordination operating mode .....	13
Point coordination wireless communication setting .....	14
1. Point coordination wireless communication setting for handheld unit .....	14
2. Point coordination wireless communication setting for cradle .....	19
Distributed coordination wireless communication setting .....	21
1. Cluster establishment example .....	21
2. Distributed coordination wireless communication setting for handheld unit .....	23
3. Distributed coordination wireless communication setting for cradle .....	25
Scanning .....	26
Keyboard wedge for Cradle .....	27
RS-232 interface for Cradle .....	30
USB interface for Cradle .....	32
Handheld scan & some global settings .....	33
Visual and audio indication for Handheld unit .....	35
UPC-A .....	36
UPC-E .....	37
EAN-13 .....	38
EAN-8 .....	39
Code 39 .....	40
Interleaved 2 of 5 .....	42
Industrial 2 of 5 .....	43

Matrix 2 of 5 .....	44
Codabar .....	45
Code 128 .....	46
Code 93 .....	47
Code 11 .....	48
MSI/Plessey .....	49
UK/Plessey .....	50
UCC/EAN 128 .....	51
China Post .....	52
GS1 DataBar (GS1 DataBar Truncated) .....	53
GS1 DataBar Limited .....	54
GS1 DataBar Expanded .....	55
PDF417 .....	56
MicroPDF417 .....	57
China Finance .....	58
G1-G6 & FN1 substitution string setting .....	60
G1-G4 string position & Code ID position .....	63
String transmission .....	64
Test Chart .....	66
Test Chart (Continued) .....	67
Troubleshooting .....	68
Maintenance .....	69
ASCII table .....	70
Barcode representing non-printable character .....	71
Return default parameters .....	72
Display firmware version & radio communication setting .....	73
Quick setting to point or distributed coordination wireless network .....	74
Configuration alphanumeric entry barcode .....	75

## Technical specifications

### Handheld unit

<b>Dimensions</b>	Length × Width × Depth: 17.0 × 7.0 × 8.3 cm	
<b>Weight</b>	201 g	
<b>Color</b>	Gray	
<b>Battery</b>	1400 mAh Lithium-ion battery	
<b>Charge time</b>	Fully charged (>80%) in 3.5 hours	
<b>Case material</b>	Fire-retardant ABS+TPU	
<b>Light source</b>	650 nm visible laser diode	
<b>Decoding rate</b>	200 times/sec	
<b>Scanning angle</b>	±60°, ±65°, ±42° (Skew, Pitch, Roll)	
<b>Decode capability</b>	UPC-A, UPC-E, EAN-13, EAN-8, ISBN/ISSN, Code 39, Code 39 full ASCII, Code 32 (Italian pharmacy, Code 39 variant), Trioptic Code 39, Interleaved 2 of 5, Industrial 2 of 5, Matrix 2 of 5, Codabar (NW7), Code 128, Code 93, Code 11(USD-8), MSI/Plessey, UK/Plessey, UCC/EAN 128, China Post, China Finance, GS1 DataBar (formerly RSS) variants	
<b>Indicator</b>	Visual, Audio	
<b>Operating mode</b>	Handheld	
<b>Programming method</b>	Manual (reading special barcode)	
<b>Program upgrade</b>	Using RSM software, while a cradle unit is required. Refer to RSM user manual.	
<b>Temperature</b>	0° to 50°C (32° to 120°F), Operating; -40° to 60°C (-40° to 140°F), Storage	
<b>Humidity</b>	5% to 95% (non-condensing)	
<b>Input voltage</b>	4.75V – 6.5 VDC	
<b>Operating current</b>	12mA (standby); 90mA (scanning); 150mA (transmitting)	
<b>Standby time</b>	Over 7 days	
<b>Read barcode per charge</b>	Over 160,000 scans per charge	
<b>Working range</b>	Up to 200 meters <sup>1</sup> (open air)	
<b>Radio link</b>	430.5 ~ 432.0MHz , 433.05 ~ 434.79MHz with adaptive frequency hopping	
<b>Decoding depth &amp; Min. element width</b>	(1 mil = 0.0254mm) <b>Long-Range series</b> 5 mil: 40-110mm 10 mil: 10-280mm 13 mil: 15-315mm 16 mil: 25-385mm 35 mil: 145-630mm	<b>High-Density series</b> 3 mil: 5-50mm 10 mil: 10-85mm 13 mil: 10-150mm 16 mil: 25-165mm 35 mil: 145-295mm
<b>Safety</b>	Laser safety: EN60825-1, Class 1 EMC: EN 55022, EN 55024 Electrical safety: EN 60950-1 Drop resistance: Multiple 1.2m (3.9ft) drops to concrete Protection class: IP52	

Note: <sup>1</sup> Test condition: temperature at 27°C, sunny day, and visibility of 5 kilometers. Natural

surroundings significantly affect the communication distance in practice. The distance drops quickly in the rainy, high-humidity, or heavy haze day; radio interference also shortens the communication distance.


## Cradle

<b>Input voltage</b>	5 VDC $\pm$ 0.25V
<b>Cable</b>	Straight 2.0m (PS2) / Straight 1.5m (USB) / Straight 2.0m (RS-232 )
<b>Dimensions</b>	Length $\times$ Width $\times$ Depth: 21.3 $\times$ 9.7 $\times$ 7.5cm
<b>Weight</b>	189g (without cable)
<b>Indicator</b>	Visual
<b>Case material</b>	ABS
<b>Programming method</b>	Manual (reading special barcode)
<b>Program upgrade</b>	PC online using RSM software. Refer to RSM user manual
<b>Temperature</b>	0° to 50°C (32° to 120°F), Operating; -40° to 60°C (-40° to 140°F), Storage
<b>Humidity</b>	5% to 95% (non-condensing)
<b>Drop specifications</b>	Unit functions normally after repeated 1.2m (3.9ft) drops to concrete
<b>Program upgrade</b>	Online

## AC/DC adaptor

<b>Input</b>	100~240V AC, 0.3A, 50~60Hz
<b>Output</b>	+5V DC, 1~1.4A
<b>Temperature</b>	0° to 50°C (32° to 113°F), Operating; -40° to 60°C (-40° to 140°F), Storage
<b>Humidity</b>	5% to 95% (non-condensing)

## Cable connector pin-outs descriptions for cradle

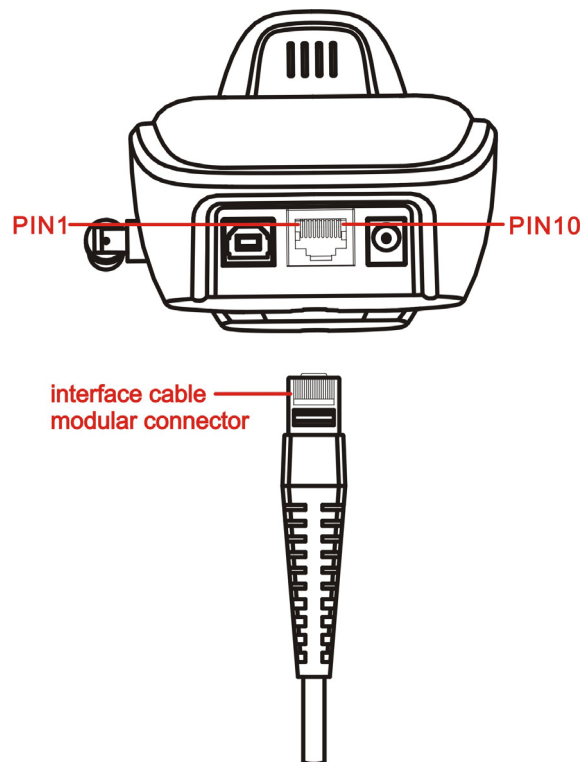

### Cable connector interface pin-outs

The pin-outs descriptions in Table 1 apply to the cable connector on the cradle and are for reference only.

Table 1-1 Cable connector pin-outs descriptions

Pin	RS232	Keyboard (PS2)
1	Power (+5V)	Power (+5V)
2	+3.3V ( for interface auto selection purpose)	Ground (for interface auto selection purpose)
3	Ground	Ground
4	Power (+5V)	Reserved
5	CTS	KeyClock
6	RxD	KeyData
7	Reserved	TermClock
8	Reserved	TermData
9	RTS	Reserved
10	TxD	Reserved

Note: Voltage level of all RS232 Pin-outs (RxD, TxD, CTS and RTS) is 0V for logic low and 3.3V for logic high.

## Default setting for each barcode


Code type	Read enable	Check digit verification	Check digit transmission	Min. code length	Proprietary code ID	AIM code ID
UPC-A	√	√	√	(12) <sup>2</sup>	A	]Em
UPC-E	√	√	√	(8) <sup>2</sup>	D	]Em
EAN-13	√	√	√	(13) <sup>2</sup>	A	]Em
EAN-8	√	√	√	(8) <sup>2</sup>	C	]Em
ISBN/ISSN <sup>1</sup>	√	√	√	(13) <sup>2</sup>	A	]Em
Code 39	√	-	-	1	M	]Am
Interleaved 2 of 5	√	-	-	6	I	]Im
Industrial 2 of 5	√	-	-	4	H	]Im
Matrix 2 of 5	√	-	-	6	X	]Im
Codabar	√	-	-	4	N	]Fm
Code 128	√	√	-	1	K	]Cm
Code 93	√	√	-	1	L	]Gm
Code 11	-	√	-	4	V	-
MSI/Plessey	-	-	-	4	O	]Mm
UK/Plessey	√	√	-	1	U	]Mm
UCC/EAN 128	√	√	-	1	K	]Cm
China Post	√	-	-	(11) <sup>2</sup>	T	]Im
China Finance	√	-	-	(10) <sup>2</sup>	Y	-
GS1 DataBar	√	-	-	(16) <sup>2</sup>	R	]em
GS1 DataBar Truncated <sup>3</sup>	√	-	-	(16) <sup>2</sup>	R	]em
GS1 DataBar Limited	√	-	-	(16) <sup>2</sup>	R	]em
GS1 DataBar Expanded	√	-	-	1	R	]em

Note: <sup>1</sup>The settings for ISBN/ISSN and EAN-13 must be the same.


<sup>2</sup> Fixed-length barcodes.

<sup>3</sup>The settings for GS1 DataBar Truncated and GS1 DataBar must be the same.

Decode zone



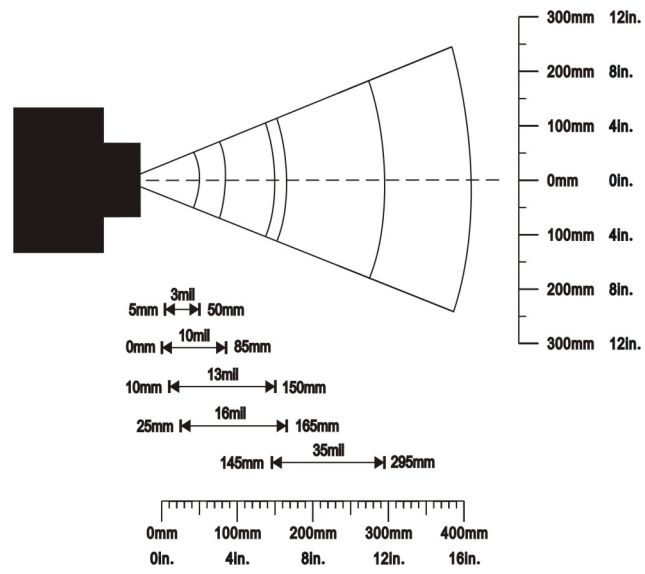


High-density series

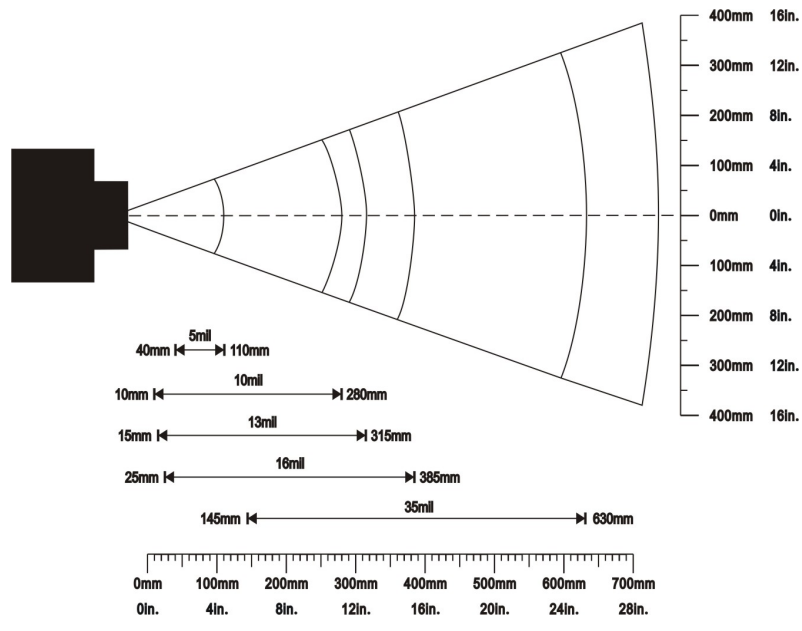

Long-range series


Dimensions

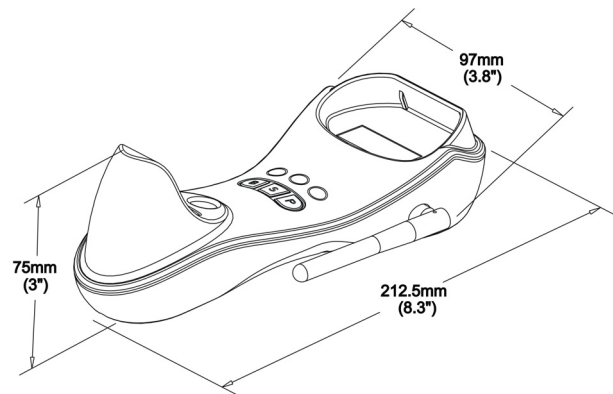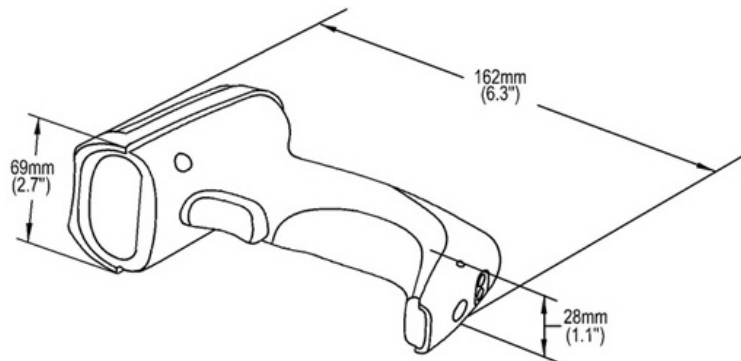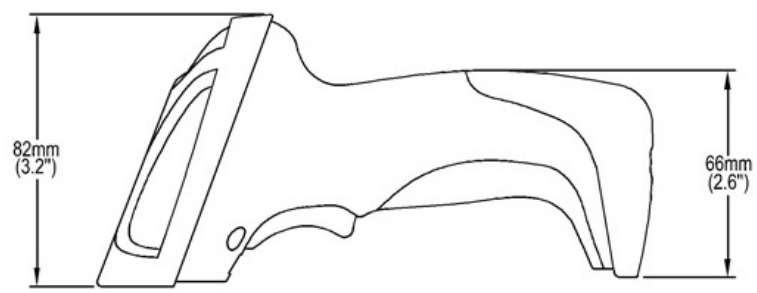




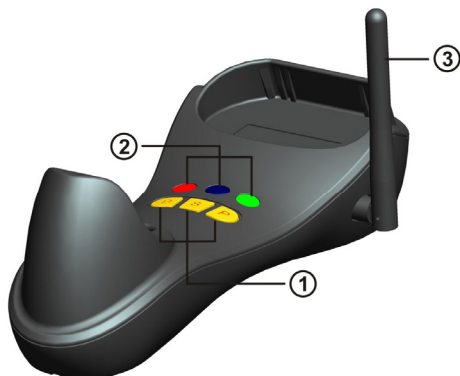
## Parts of the scanner

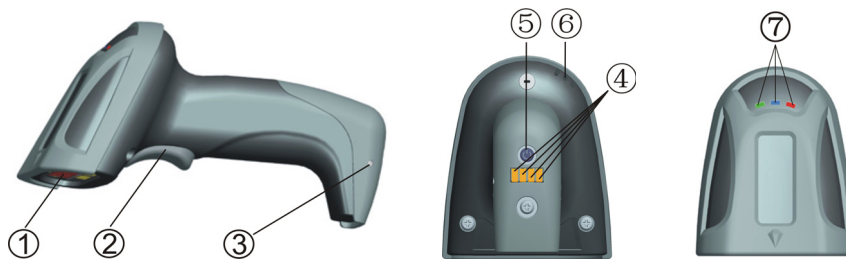


### Handheld unit



- ① Exit window
- ② Trigger
- ③ Red LED (Charging indicator)
- ④ Communication/Charge socket
- ⑤ Power button 
- ⑥ Sound hole
- ⑦ Red LED (Not successful transmission); Blue LED (Power); Green LED (Setting)

### Cradle



- ①  button (Reserved);  button (Upgrade / Reset);  button (USB Emulate)
- ② Red LED (Initiation failure); Blue LED (Power); Green LED (Data in/Radio frequency hopping indicator)
- ③ Antenna

## Power on, power off handheld unit and charge battery

### Power on handheld unit:


Press the power button  (see Parts of the scanner) for two seconds.

### Power off handheld unit:

Press the power button  (see Parts of the scanner) for two seconds.

### Charge battery:

1. Please charge the battery before the first time of use. The charge indicator (red LED) on the handheld unit is turned on when the charging is in process. When the charging process completes, the red LED is turned off.
2. Charging time: 8 hours for fully charged.

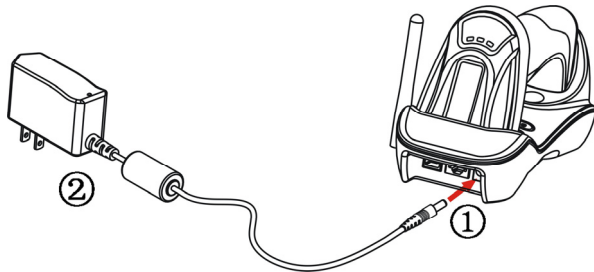


## Installation of cradle

*Note: If any of the below operation is incorrect, turn off the power immediately and check the scanner for any improper connections. Go through all steps again.*


### With PS2 cable

1. Plug one end of the PS2 cable to the cradle, one end to PS2 port on PC, and one end to the keyboard.
2. Plug the output of the AC/DC adaptor into the power terminal of on the cradle. Plug the AC/DC adaptor provided by the manufacturer into an electrical outlet.

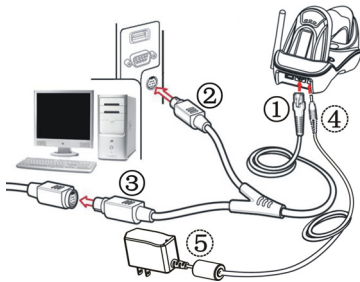


### With USB cable

1. Plug one end of the USB cable to the cradle. Plug the other end into the USB port of the computer.
2. Plug the output of the AC/DC adaptor into the power terminal of on the cradle. Plug the AC/DC adaptor provided by the manufacturer into an electrical outlet.
3. Windows gives message on “new hardware found – USB HID input device found”, then driver will be installed on request.
4. After successfully installing the new hardware, message will be given: “hardware installed successfully and ready to use”.
5. If any problem encounters during the installation process, please unplug the USB cable from the computer and repeat step 1-3.

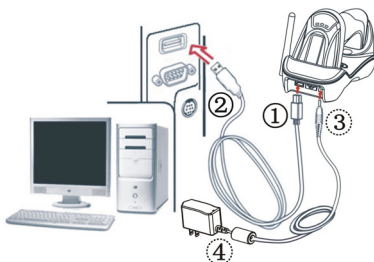

## With RS-232 cable

1. Connect the DB9 serial communication cable with the cradle and the COM port of the computer.
2. Plug the output of the AC/DC adaptor into the power terminal of on the cradle. Plug the AC/DC adaptor provided by the manufacturer into an electrical outlet.

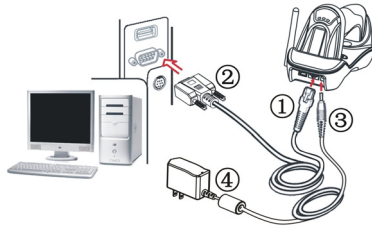


## Programming instruction

The steps of programming are:

1. Scan the **SETUP** bar code on the parameter setting part.
2. Enter the option mode by scanning the **Option bar code**.
3. To the right of the option barcode, the necessary alphanumeric inputs are listed. Scan these alphanumeric entries from the **back foldout** page.
4. Scan the **END** bar code, listed on the lower right hand corner of each parameter setting part.
5. **Notes that only one parameter can be setup at each time.**
6. During the process of programming, LED is lighting to indicate the programming correctness. LED will go off if any incorrect programming operation performed.
7. After each successful programming, LED will go off and the scanner will beep twice.
8. Throughout the programming bar code menus, **the factory default settings are indicated with asterisks (\*)**.

**Example:** to set **Flow control** to be XON/XOFF.

**Steps:** Scan the following barcodes in order.

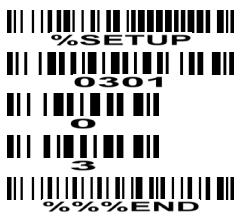

# Description of point coordination and distributed coordination wireless network

Notes:

1. In this section, “cluster” denotes an association of a cradle and a number of handheld units.
2. In this section, “RF” is the abbreviation for “radio frequency”.

✚ The scanner offers two kinds of wireless network topology: point coordination and distributed coordination.

**Point coordination topology:** This network topology employs TDM/FDM integrated technique. Different cluster operates in different frequency, suitable for a place where mass data transmission at short intervals is in need. This network topology utilizes a token communication scheme. When working as a cluster, the cradle talks to the associated handheld units one by one. Only one handheld unit can transmit data to the cradle at a time. One single cluster can support up to 16 handheld units. Warning message will be given when the radio communication is out of working range. Due to an operating cradle occupies one selected frequency channel all the time, thus the radio signal generated does interfere the nearby instruments which adapt the same frequency, such as a remote controller of a garage door.


**Distributed coordination topology:** This network topology employs TDM technique. Different cluster can operate either in the same frequency or in different frequency. One single cluster can support up to 16 handheld units. In the same working area it supports multiple clusters and up to 2000 handheld units operating simultaneously. An operating cradle only occupy the selected frequency channel during data transmitting, so it will not interfere the nearby instruments which adapt the same frequency.

✚ Switch between point coordination topology and distributed coordination topology can be done by scanning corresponding configuration barcode. Note that both cradle and associated handheld units must be configured.


✚ The handheld unit should be placed in the cradle for power charging. It is suggested to prepare an individual cradle for power charging purpose if working as a cluster.

## 1. Sketch map of point coordination operating mode

The scanner utilizes 430.5 ~ 432.0MHz, 433.05 ~ 434.79MHz RF wireless communication with LR-433-WPAN wireless communication protocol. LR-433-WPAN protocol first time introduces self-adaptive frequency hopping technique. With this new protocol, a cordless scanner is able to pick up a high-quality RF channel from a cluster of channels in terms of consolidated communication. LR-433-WPAN protocol supports up to 256 handheld units (16 handheld-units/cradle x 16 cradle = 256) within the same effective communication range. A maximum circle of poll time for one cradle with 16 handheld units is 1 second, while the poll time for one cradle with one handheld unit is less than 0.1 second.

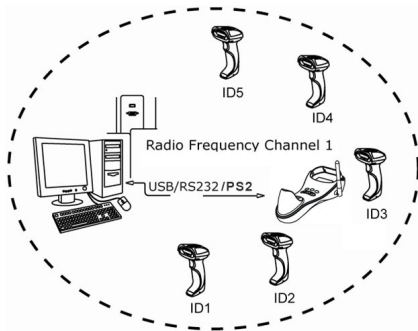


Cluster 1

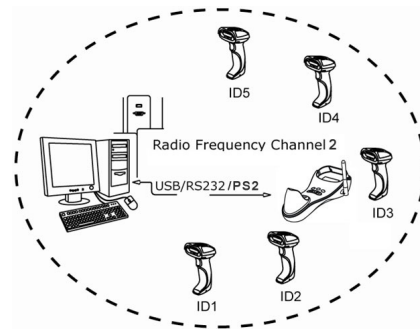


Cluster 2

## 2. Sketch map of distributed coordination operating mode




This series of cordless barcode scanner is working at 430MHz ~ 432MHz, 433.05MHz ~ 434.79MHz and is covered by a patent of wireless communication method named LR-433-WPAN wireless communication protocol.

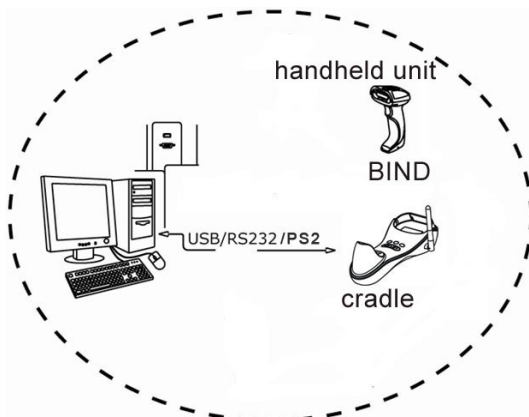

Single cluster - single handheld unit

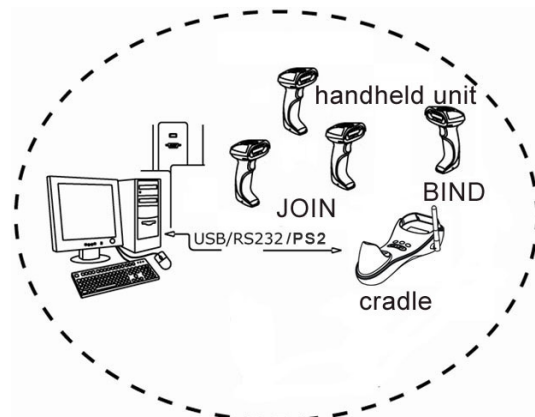

Single cluster – multiple handheld units

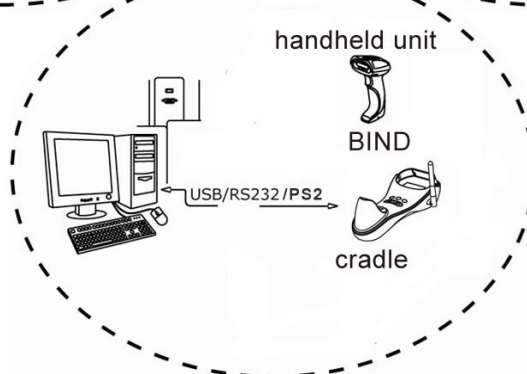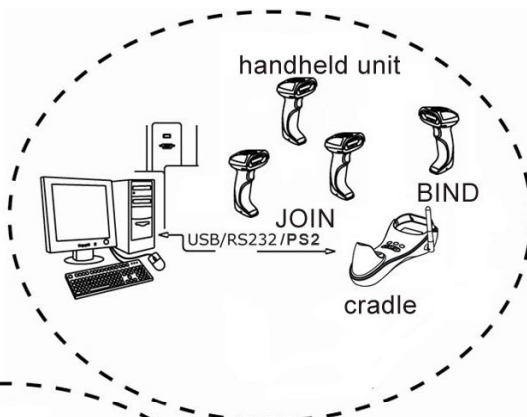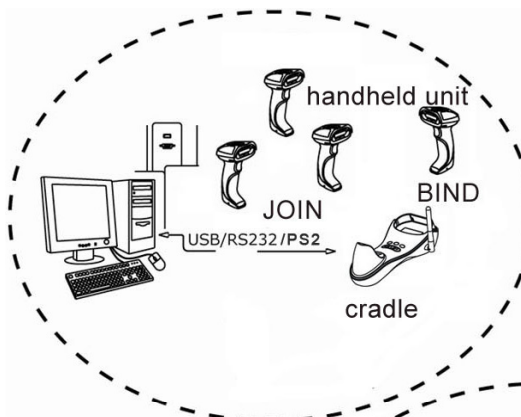

Multiple clusters

## Point coordination wireless communication setting

### 1. Point coordination wireless communication setting for handheld unit

**Wireless network topology for handheld unit:** There are two kinds of wireless network topology that can be employed: point coordination and distributed coordination.

**Handheld unit RF channel No.:** The scanner offers 16 different radio frequency channels for the data transmission between handheld unit and cradle. The number of channel can be increased.

**Handheld unit ID:** The scanner offers 16 different handheld unit IDs.

**Example:** to set a handheld unit to work on channel 2 with ID 15.

**Steps:** Scan the following barcodes in order.



**Radio power level for handheld unit:** By selecting, you can change the radio power level for handheld unit.

**Frequency hopping:** If it is enabled, the scanner is able to pick up a higher-performance radio frequency channel from a group of channels in terms of consolidated communication.

**Batch data mode:**

**Disable-** Do not batch data. The handheld unit attempts to transmit every scanned barcode. If the transmission is failed, the barcode data is ignored.

**Out-of-range batch -** The handheld unit starts storing barcode data when it loses its connection to a remote device (for example, when a user holding the handheld unit walks out of range). Data transmission is triggered by reestablishing the connection with the cradle (for example, when a user holding the handheld unit walks back into range).

**Standard batch-** The handheld unit starts storing barcode data after “%%%EBM” (*Enter Batch Mode*) is scanned. Data transmission is triggered by scanning “%%%SBD” (*Send Batch Data*).

In Out-of-range batch or Standard batch modes, calculate the number of barcodes the handheld unit can store as follows:

Number of storable barcodes = 16,384 bytes of memory / (number of characters in the barcode + 2).

**Beep on reconnect attempt:** This feature is active only when the Out-of-range batch operating mode is selected. If this feature is enabled, the beeper emits 4 short beeps every 5 seconds while the reconnection attempt is in progress.

**Radio connection checking interval:** This feature is active only when the Out-of-range batch operating mode is selected. The handheld unit checks the radio communication with the cradle once within the time interval.

**Save data at low-battery or power-off:** If it is enabled, the handheld unit will save data to memory while the battery is low or before the power is off.



**Low battery indicator:** If it is enabled, while the power is low, the power LED on the handheld unit flashes 5 times, and the beeper emits 5 beepers for every 10 minutes or 200 scans. In this battery low status, the power LED flashes 2 times by pulling the scanner trigger.


**Enter sleeping mode interval:** If it is enabled, the handheld unit will enter sleeping mode while no operation beyond the time interval defined; the handheld unit will return to normal mode by pulling the scanner trigger.

**Enter transmitting data mode interval:** There is no continuous scanning motion time interval of before the domination handheld unit entering the barcode transmission status. By default when out of range, if there is barcode data awaiting transmission, the handheld unit will try to transmit data to the cradle after no scanning motion occurs for 5 seconds. This can avoid conflict between transmission of barcode data and scanning barcode motion requested by user.

**VALID/INVALID/LOCK/UNLOCK protocol :** If enabled, the host will validate the data after receiving data from the connected cradle. The host will send VALID/INVALID/LOCK instruction to the cradle after validating the data and the cradle will divert the instruction to the associated handheld unit. The handheld unit will give different audio and visual indication depending on the instruction received from the cradle.

Note that 1 handheld unit is paired with 1 cradle/base unit to work in this mode is suggested, because some pauses may be obvious before data validation.

When a LOCK instruction is received, the decoding function of handheld unit is deactivated and will be reactivated until the receipt of a UNLOCK instruction. The sketch map is shown below:

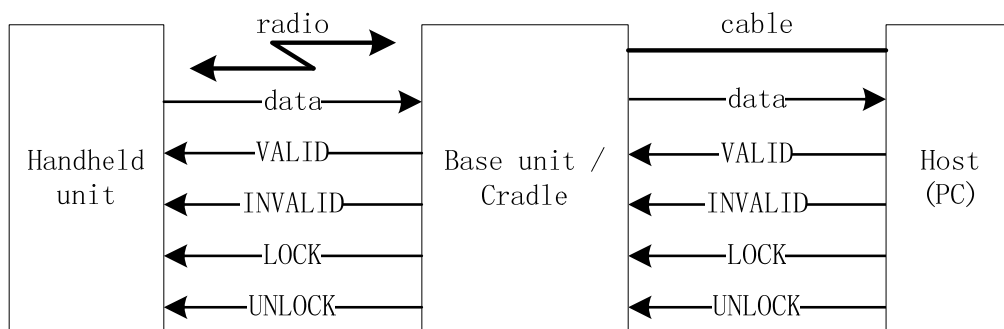

#### 1 ) Data packet format sent from base unit / cradle to PC.


Byte	0	1	2	3	4	5~(Packet length-1)	Last byte
Segment	Packet length	Reserved	Handheld unit ID	0x22	Data length	Data	Checksum <sup>1</sup>

Note 1: Calculate the sum of the first byte to the byte next to the last byte. The last two bits of the sum are checksum.

#### 2 ) Format and description of the command packet sent from PC to base unit / cradle.

Command packet	Packet format	Description
VALID	1 byte, 0x33	Validity of data received.
INVALID	1 byte, 0x66	Invalidity of data received.
LOCK	1 byte, 0x77	Data received is abnormal. The decoding function of handheld unit is deactivated.
UNLOCK	1 byte, 0x88	The decoding function of handheld unit is activated.

3 ) Operations to be performed by the base unit / cradle after receiving the command data packet sent from PC.

Command packet	Operations of base unit / cradle	LED indication
VALID	Send VALID command packet to the handheld unit.	Red LED flashes once, green LED on.
INVALID	Send INVALID command packet to the handheld unit.	Red LED flashes once, green LED off.
LOCK	Send LOCK command packet to the handheld unit, and then wait for the UNLOCK command packet to be sent from PC.	Red LED flashes once, green LED keeps flashing.
UNLOCK	Send UNLOCK command packet to the handheld unit.	Red LED flashes three times, green LED off.
-	The base unit / cradle will enter timeout erroneous state, while no data packet is received within the time interval defined. The base unit / cradle must be reset by pressing the Reset  button to enter the normal working state.	Both the red and the green LED keep flashing.

4 ) Operations to be performed by the handheld unit after receiving the command packet sent from the base unit / cradle.

Command packet	Operations of handheld unit	Beeper indication	LED indication
VALID	Return to normal working state	Two beeps with short duration (50ms)	Red LED off, green LED on.
INVALID	Return to normal working state	Two beeps with long duration (200ms)	Red LED on, green LED on.
LOCK	Waiting for UNLOCK command packet from the base unit / cradle, no further operation allowed, e.g. scanning.	Two beeps with long duration (200ms)	Red LED on, green LED flashes.
UNLOCK	Return to normal working state.	Two beeps with short duration (50ms)	Red LED off, green LED off.
-	The handheld unit will enter timeout erroneous state, while no command packet is received within the time interval defined. The handheld unit must be switched off then be switched on to reboot and return normal working state.	Five beeps with short duration (50ms)	Red LED and green LED flash.

**Waiting for command packet interval:** If the option is set as “always”, the handheld unit keeps waiting for command packet sent by the base unit / cradle after sending barcode data to the base unit / cradle. The cradle will also keep waiting for the command packet sent from the host PC after sending the barcode data to the host PC. If there is no command packet received within the defined interval, the base unit / cradle and the handheld unit will enter the lock state, and the handheld unit keeps flashing the LED.

||||| %SETUP SETUP

Option barcode	Option	Alpha. entry
Wireless network topology for handheld unit       0700	Point coordination Distributed coordination	00* 01
Handheld unit RF channel No.       0701	02-16	02-16 06*
Handheld unit ID       0702	01-16	01-16 01*
Radio power level for handheld unit       0703	10dbm 7dbm 5dbm 0dbm -5dbm -10dbm -15dbm	01* 02 03 04 05 06 07
Frequency hopping       0704	Disable Enable	00 01*
Batch data mode       0705	Disable Out-of-range batch Standard batch	00* 01 02
Beep on reconnect attempt       0706	Disable Enable	00* 01
Radio connection checking interval       0707	00-ffH (second)	00-ffH 03*
Save data at low-battery or power-off       0708	Disable Enable	00* 01
Low battery indicator       0709	Disable Enable	00 01*
Enter sleeping mode interval       0710	00-ffH (minute)	00-ffH 0f*
Enter transmitting data mode interval       0711	00-ffH (minute)	00-ffH 0f*
VALID/INVALID/LOCK/UNLOCK protocol       0720	Disable Enable	00 01*
Waiting for command packet interval       0721	Always 01-99(100ms)	00* 01-99

||||| %%%END END

Enter batch mode

||||| %%%EBM |||||

Send batch data


||||| %%%SBD |||||

Show channel information of handheld unit✕

||||| %%%SCI |||||

Note: The settings indicated with (※) are valid only when the cradle is in **upgrade ready mode**.

#### **Cradle entering upgrade ready mode**

Keep pressing the  button on the cradle, until the blue LED is flashing. Then three LEDs will all be turned ON, this indicates the cradle being upgrade ready mode.

## 2. Point coordination wireless communication setting for cradle

**Wireless network topology for cradle:** There are two kinds of wireless network topology that can be employed: point coordination and distributed coordination.

**Cradle RF channel No.:** The scanner offers 16 different radio frequency channels for the data transmission between handheld unit and cradle.

**Bind the first handheld unit ID:** This setting is used to bind the first handheld unit ID. By this setting, the cradle communicates with ONLY one handheld unit with the binding ID. 16 different handheld unit IDs are offered.

**Recruit a next handheld unit ID:** This setting is used to associate one more handheld unit ID with the cradle. 16 different handheld unit IDs are offered.

**Example 1:** to set a cradle to work on channel 2, and to bind the first handheld unit ID as 15.

**Steps:** Scan the following barcodes in order.



**Example 2:** to set a cradle to work on channel 3, and communicate with the handheld units with ID 5 and 15. The first step is to bind the first handheld unit ID as 5, then recruit a next handheld unit ID as 15.

**Steps:**

1. Keep pressing the **S** button on the cradle, until the blue LED is flashing. Then three LEDs will all be turned ON, this indicates the cradle being upgrade/setting ready mode.
2. Scan the following barcodes in order.









**Radio power level for cradle:** Refer to Radio power level for handheld unit of section “Point coordination wireless communication setting for handheld unit”.

**Frequency hopping:** Refer to Frequency hopping of section “Point coordination wireless communication setting for handheld unit”.



## SETUP

Option barcode	Option	Alpha. entry
Wireless network topology for cradle ✖  <b>0800</b>	Point coordination Distributed coordination	00* 01
Cradle RF channel No. ✖  <b>0801</b>	02-16	02-16 06*
Bind the first handheld unit ID ✖  <b>0802</b>	01-16	01-16 01*
Recruit a next handheld unit ID ✖  <b>0803</b>	01-16	01-16
Radio power level for cradle  <b>0804</b>	10dbm 7dbm 5dbm 0dbm -5dbm -10dbm -15dbm	01* 02 03 04 05 06 07
Frequency hopping  <b>0805</b>	Disable Reserved	00*



END

Show channel information of Cradle✖



Note: The settings indicated with (✖) are valid only when the cradle is in **upgrade ready mode**.

## Cradle entering upgrade ready mode

Keep pressing the **S** button on the cradle, until the blue LED is flashing. Then three LEDs will all be turned ON, this indicates the cradle being upgrade ready mode.

# Distributed coordination wireless communication setting

## 1. Cluster establishment example

### 1.1 Establish the wireless link between the cradle and the first handheld unit.

**Step 1.0** Please refer to chapter “return default parameters & version chapter” to check the current wireless network topology. If it is point coordination network topology, please scan the optional barcode 0700 and 0800 to change the network topology.

**Step 2.0** Scans the following barcode to return to default parameters.

☞ This step can be omitted.



**Step 3.0** Scan the following barcode to start configuring handheld unit.



**Step 3.1** Scan the following barcode to assign an address to a handheld unit.



**Step 3.2** Scan four digits as an address.

☞ All handheld units used in the same area must have different addresses.

+

Four digits for the handheld unit address ( From 0000 to 1999 )



**Step 3.3** Scan the following barcode to complete the configuration.



**Step 4.0** Scan the following barcode to bind the handheld unit with the cradle.

☞ The blue LED on the handheld will blink to indicate that the handheld unit is ready to be positioned onto the cradle.

☞ Scan BIND barcode to pair the handheld unit and the cradle. The handheld unit is dedicated to the cradle. Any previous bound handheld units will be excluded.

☞ If the cradle is not bound to a handheld unit, its address assumes a random value which can cause conflicts and malfunctions to other cradles within its range.



**Step 4.1** Firmly position the handheld unit onto the cradle. Within 10 seconds, two beeps will be emitted to signal that the cradle has been paired to the handheld unit, and the blue LED on the handheld unit will go off. If three beeps are emitted, it indicates unsuccessful pairing between the cradle and the handheld unit; then repeat step 4.0.

## 1.2 Establish the wireless link between successive handheld units and the same cradle.

**Step 5.0** Please refer to instruction in previous section to pair the cradle with the first handheld unit.

**Step 6.0** Repeat steps 3.0 ~ 3.3 to set radio address of the second handheld unit.

**Step 7.0** Scan JOIN barcode to pair the second handheld unit with the cradle.

☞ The blue LED on the handheld unit will blink to indicate that the handheld unit is ready to be positioned onto the cradle.



**Step 7.1** Firmly position the handheld unit onto the cradle. Within 10 seconds, two beeps will be emitted to signal that the cradle has been paired to the handheld unit, and the blue LED on the handheld unit will go off. If three beeps are emitted, it indicates unsuccessful pairing between the cradle and the handheld unit; then repeat steps 7.0 ~ 7.1.

**Step 8.0** Repeat steps 6.0 ~ 7.1 to pair the third, the fourth, ... the nth handheld unit with the cradle.

☞ One single cradle can pair with up to 16 handheld units.

## 1.3 Verify the success of configuration

Please refer to the chapter of "Return default parameters, version and wireless communication information" to verify the success of configuration.



## 2. Distributed coordination wireless communication setting for handheld unit

**Wireless network topology for handheld unit:** There are two kinds of wireless network topology that can be employed: point coordination and distributed coordination.

**Handheld unit RF channel No.:** The scanner offers 16 different radio frequency channels for the data transmission between handheld unit and cradle. The number of channel can be increased.







**Handheld unit address:** The scanner offers 2000 different four-digit radio addresses for handheld unit. Note that all scanners used in the same area must have different addresses.

**Radio power level for handheld unit:** By selecting, you can change the radio frequency power level for handheld unit.

**Interval for radio communication:** An unsuccessful transmission is verified while the handheld unit has not received data beyond the interval. If a RS232 is used, this value should be set not less than feedback delay of RS232 serial port transmission.

**Inform the result of wired transmission for handheld unit:** If this option is enabled, the cradle will only inform the handheld unit the success of data transmission after the data has been successfully transmitted from cradle to host PC.

 **%SETUP** SETUP

Option barcode	Options	Value
Wireless network topology for handheld unit  <b>0700</b>	Point coordination Distributed coordination	00* 01
Handheld unit RF channel No.  <b>0701</b>	02-16	02-16 06*
Handheld unit address  <b>0712</b>	0000-1999	0000-1999 0000*
Radio power level for handheld unit  <b>0703</b>	10dbm 7dbm 5dbm 0dbm -5dbm -10dbm -15dbm	01* 02 03 04 05 06 07
Interval for radio communication  <b>0713</b>	02-20 ( second )	02-20 02*
Inform the result of wired transmission for handheld unit  <b>0714</b>	Disable Enable	00* 01

 **%%%END** End of setup

Bind



Join




Show channel information of handheld unit✕



Note: The settings indicated with (✕) are valid only when the cradle is in **upgrade ready mode**.

### Cradle entering upgrade ready mode


Keep pressing the  button on the cradle, until the blue LED is flashing. Then three LEDs will all be turned ON, this indicates the cradle being upgrade ready mode.




### 3. Distributed coordination wireless communication setting for cradle


**Wireless network topology for cradle:** There are two kinds of wireless network topology that can be employed: point coordination and distributed coordination.

**Cradle RF channel No.:** The scanner offers 16 different radio frequency channels for the data transmission between handheld unit and cradle.


**Radio power level for cradle:** By selecting, you can change the radio frequency power level for cradle.

 %SETUP

Option barcode	Options	Value
Wireless network topology for cradle✕  0800	Point coordination Distributed coordination	00* 01
Cradle RF channel No.✕  0801	02-16	02-16 06*
Radio power level for cradle✕  0804	10dbm 7dbm 5dbm 0dbm -5dbm -10dbm -15dbm	01* 02 03 04 05 06 07


 %%%END

---

Displaying wireless communication result for cradle✕  
 %%BSCI

Note: The settings indicated with (✕) are valid only when the cradle is in **upgrade ready mode**.

#### Cradle entering upgrade ready mode

Keep pressing the  button on the cradle, until the blue LED is flashing. Then three LEDs will all be turned ON, this indicates the cradle being upgrade ready mode.

## Scanning

When the scanner is scanning, ensure the scan line crosses every bar and space of the symbol.



RIGHT



WRONG

## Keyboard wedge for Cradle

**Keyboard type:** As a keyboard interface, the scanner supports most of the popular PCs and IBM terminals.

**Keyboard layout:** The scanner supports different national keyboard layouts.

**Clock period:** According to the PS2 protocol, the clock is provided by the device, e.g. keyboard or scanner, with the period between 60us to 100us.

**Delay-after-compound-key:** In some rare occasions, machine with low speed PS2 communication port would require a free time gap following the press/release of the compound key (Shift, Ctrl or Alt).

**Numeric key:**

**Alphabetic key-** the scanner will output code result as alphabetic key.

**Numeric key-** the scanner will output code result as pressing numeric keypad ( '0', '1', '2', '3', '4', '5', '6', '7', '8', '9', '.', '+', '-', '/', '\*' only).

**Alt+ keypad-** the scanner will output code result as pressing Alt+ numeric key (on keypad). Note that the Num Lock control key must be ON. This setting can be specially adapted for use with different national keyboard layout.

**Power-on simulation:** All of the PCs check the keyboard status during power-on self test. It simulates keyboard timing and passes keyboard present status to the PC during power-on.

**Inter-character delay:** This delay is inserted after each data character transmitted.




**Inter-byte delay:** This delay is inserted after each byte transmitted. Normally a character is comprised of three or above bytes.








 


**Block trans. delay:** It is a delay timer between barcode data output. This feature is used to transfer continually with shorter barcode data.

**Caps Lock reversion:** By setting enable, the status of Caps Lock key (i.e. being pressed ON or OFF) on the keyboard is simulated in a reversion status.

**Caps Lock override:** If this function is enabled, on AT or AT notebook hosts, the keyboard ignores the state of the Caps Lock key. Therefore, an 'A' in the bar code is sent as an 'A' no matter what the state of the keyboard's Caps Lock key.

### A guide of setting while the scanned data is incorrectly displayed on the host

-  If some characters are missed or some additional characters are incorrectly displayed on the host, set the Inter-byte delay (0208) to be "01" or greater value.
-  If some capital character (e.g. "A") or compound-key-characters (e.g. "shift+", "Ctrl +", "Alt+") are displayed incorrectly, set the Delay-after-compound-key to be "01" or greater value.
-  If some digits are incorrectly displayed as some symbol characters (e.g. "1" and "2" are displayed incorrectly as "!" and "@"), set the Clock period (0203) to be greater value (e.g. 04, 05).

Option bar code	Option	Alpha. entry
Keyboard type  0201	IBM AT, PS/2 Apple Mac compatibles Reserved	00* 01 02
Keyboard layout  0202	USA Turkish F Turkish Q French Italian Spanish Slovak Denmark Japanese	00* 01 02 03 04 05 06 07 08
Clock period  0203	60us 70us 80us 90us 100us 200us	00 01 02* 03 04 05
Delay-after-compound-key  0204	0ms 10ms 20ms 40ms 80ms	00* 01 02 03 04
Numeric key  0205	Alphabetic key Numeric keypad Alt+ keypad	00* 01 02
Power-on simulation  0206	Disable Enable	00* 01
Inter-character delay  0207	0ms 5ms 10ms 20ms 40ms 80ms	00* 01 02 03 04 05
Inter-byte delay  0208	1ms 2ms 4ms 8ms	00* 01 02 03
Caps Lock reversion  0209	Disable Enable	00* 01
Caps Lock override  0210	Disable Enable	00* 01

|||||  
%SETUP SETUP

Option bar code	Option	Alpha. entry
-----------------	--------	--------------

|||||  
%%%END END

## RS-232 interface for Cradle

### Flow control:

**None**-The communication only uses TxD and RxD signals without any hardware or software handshaking protocol.

**RTS/CTS**-If the scanner wants to send the barcode data to host computer, it will issue the RTS signal first, wait for the CTS signal from the host computer, and then perform the normal data communication. If there is no replied CTS signal from the host computer after the timeout duration, the scanner will issue an error indication. By setting (Host idle: Low RTS) or (Host idle: High RTS), the scanner can be set to match the Serial Host RTS line.

**XON/XOFF**-An XOFF character turns the scanner transmission off until the scanner receives an XON character.









**ACK/NAK**-After transmitting data, the scanner expects either an ACK (acknowledge) or NAK (not acknowledge) response from the host. When a NAK is received, the scanner transmits the same data again and waits for either an ACK or NAK. After three unsuccessful attempts to send data when NAKs are received, the scanner issues an error indication and discards the data.

**Inter-character delay:** Refer to Inter-character delay of Keyboard wedge.

**Response delay:** This delay is used for serial communication of the scanner when it waits for a handshaking acknowledgment from the host.



 %SETUP SETUP

Option bar code	Option	Alpha. entry
Flow control  0301	None RTS/CTS (Host idle: Low RTS) RTS/CTS (Host idle: High RTS) XON/XOFF ACK/NAK	00* 01 02 03 04
Inter-character delay  0302	0ms 5ms 10ms 20ms 40ms 80ms	00* 01 02 03 04 05
Reserved  0303		
Response delay  0304	00-99 (100ms)	00-99 00*
Baud rate  0305	300 600 1200 2400 4800 9600 19200 38400 57600 115200	00 01 02 03 04 05* 06 07 08 09
Parity  0306	None Odd Even	00* 01 02
Data bit  0307	8 bits 7 bits	00* 01
Stop bit  0308	One bit Two bits	00* 01

 %%%END END

## USB interface for Cradle





**USB device type:** When the cradle is connected to a PC with a USB cable, it will be identified as a HID keyboard.

**Keyboard layout:** Refer to Keyboard layout of Keyboard wedge for Cradle.

**Host comm. port speed:** By selecting, the user can change the output speed of the scanner to match the speed of the host USB communication port. Generally, set 00 or 01 to work with high communication speed. If some output characters of barcode have been missed, the user may need to set 07 or 08 to slow the data transmission speed of the scanner.

**Numeric key:** Refer to Numeric key of Keyboard wedge for Cradle.



Option bar code	Option	Alpha. entry
USB device type  <b>0901</b>	HID keyboard HID keyboard for Apple Mac USB virtual COM	00* 01 02
Keyboard layout  <b>0902</b>	USA Turkish F Turkish Q French Italian Spanish Slovak Denmark Japanese	00* 01 02 03 04 05 06 07 08
Host comm. port speed  <b>0903</b>	0-8 ( 0: highest; 8: lowest )	00-08 02*
Numeric key  <b>0904</b>	Alphabetic key Numeric keypad Alt+ keypad	00* 01 02



## Handheld scan & some global settings

### Scanning mode:

**Good-read off-**The trigger button must be pressed once to activate scanning. The light source of scanner stops scanning when there is a successful reading or no code is decoded after the **Stand-by duration** elapsed.

**Momentary-**The trigger button acts as a switch. Press button to activate scanning and release button to stop scanning. The light source of scanner stops scanning when there is a successful reading or no code is decoded after the **Stand-by duration** elapsed.

**Alternate-**The trigger button acts as a toggle switch. Press button to activate or stop scanning.

**Continue-**The scanner always keeps scanning, and it does not matter when the trigger button is pressed or duration is elapsed.

**Timeout off-**The trigger button must be pressed once to activate scanning. The light source of scanner stops scanning when no code is successful decoded after the **Stand-by duration** elapsed.

**Same barcode delay time:** If a barcode has been scanned and output once successfully, the laser beam must be off or moved away from the barcode beyond delay time to active scanning the same barcode. When this feature is set to be "0xFF", then the delay time is indefinite.

**Double confirm:** If it is enabled, the scanner will require a several times of same-decoded-data to confirm a valid reading.

**Global Max./Min. code length:** These two lengths are defined as the valid range of decoded barcode data length. Make sure that the minimum length setting is no greater than the maximum length setting, or otherwise the labels of the symbology will not be readable. In particular, the same value can be set for both minimum and maximum reading length to force the fixed length barcode decoded.

### Notes:

1. Please set the max./min. length for individual barcode in later sections, if special demand is requested.
2. The number of check digits is included in max./min. code length.
3. These two settings have no effect on the symbologies with fixed-length, e.g. UPC-A, UPC-E, EAN-13, EAN-8 and China Post.

**Global G1-G6 string selection:** The scanner offer one or two string group for ALL symbologies. By setting one or two digits to indicate which string group you want to apply. You may refer to the chapters of "String setting" and "String position & Number of truncated leading/ending character".

Example: Group 1 → set 01 or 10. Group 2 and 4 → set 24 or 42.










 
All valid settings include 00, 01, 02, 03, 04, 05, 06, 10, 11, 12, 13, 14, 15, 16, 20, 21, 22, 23, 24, 25, 26, 30, 31, 32, 33, 34, 35, 36, 40, 41, 42, 43, 44, 45, 46, 50, 51, 52, 53, 54, 55, 56, 60, 61, 62, 63, 64, 65 and 66.

**Element amendment:** If it is enabled, the scanner can read the barcode comprised with bars and spaces in different scale.

**Printable character only:** If it is enabled, the scanner will output the printable characters only, i.e. in ASCII from 20H to 7EH.

**Decoder optimization:** If it is enabled, the scanner will optimize the decoder with error correction. This function is not effective for all types of barcodes.

 %SETUP SETUP

Option bar code	Option	Alpha. entry
Scanning mode  <b>0401</b>	Good-read off Momentary Alternate Continue Timeout off	00 01* 02 03 04
Standby duration  <b>0402</b>	01-99 (second)	01-99 04*
Same barcode delay time  <b>0403</b>	00-FF <sub>16</sub> (50ms)	00-FF <sub>16</sub> 08*
Double confirm  <b>0404</b>	00-09 (00: no )	00-09 00*
Global max. code length  <b>0405</b>	04-99	04-99 99*
Global min. code length  <b>0406</b>	01-99	01-99 04*
Global G1-G6 string selection  <b>0407</b>	00-66	00-66 00*
Element amendment  <b>0408</b>	Disable Enable	00 01*
Printable character only  <b>0409</b>	Disable Enable	00* 01
Decoder optimization  <b>0410</b>	Disable Enable	00 01*

 %%%END END

## Visual and audio indication for Handheld unit

**Power on alert:** After power-on the scanner will generate an alert signal to indicate a successful self-test.

**LED indication:** After each successful reading, the LED above the scanner will light up to indicate a good barcode reading.

**Beeper indication:** After each successful reading, the scanner will beep to indicate a good barcode reading, and its beep tone duration is adjustable.

**Beep tone duration:** This parameter can be adjusted for a good reading upon favorite usage.

**Volume of beeper:** This parameter can be adjusted for different level of the volume of the beeper.

Example:

Visual and audio indication of handheld unit for RF transmission

Successful Transmission	Audio (Beeper)	Red LED on handheld unit
Yes	None	Off
No	Three beeps	On

||||| %SETUP ||||| SETUP

Option bar code	Option	Alpha. entry
Power on alert       0501	Disable	00
	Enable	01*
LED indication       0502	Disable	00
	Enable	01*
Beeper indication       0503	Disable	00
	Enable	01*
Beep tone duration       0504	01-09 (10ms )	01-09
		05*
Volume of beeper       0505	Low	00
	Middle	01
	High	02*

||||| %%%END ||||| END

# UPC-A

**Read: Format**

Leading zero	Data digits (11 digits)	Check digit
--------------	-------------------------	-------------

**Check digit verification:** The check digit is optional.

**Check digit trans.:** By setting Enable, check digit will be transmitted.

**Code ID setting:** Code ID is a one-or-two-character string used to represent the symbol upon a succeeding reading. If you want application to transmit Code ID, you must set **Code ID transmission** to be enabled. Refer to the chapter of String transmission.

**Insertion group selection:** Refer to **Global insertion group selection** of the chapter of Hand-held scan & some global settings.

**Supplement digits:** The Supplement digits barcode is the supplemental 2 or 5 characters.

**Format**









Leading zero	Data digits (11 digits)	Check digit	Supplement digits 2 or 5
--------------	-------------------------	-------------	--------------------------

**Truncation/Expansion:**

**Truncate leading zeros-** The leading “0” digits of UPC-A data characters can be truncated when the feature is enabled.

**Expand to EAN-13-** It extends to 13-digits with a “0” leading digit when the feature is enabled.

 %SETUP SETUP

Option bar code	Option	Alpha. entry
Read  1101	Disable Enable	00 01*
Check digit verification  1102	Disable Enable	00 01*
Check digit trans.  1103	Disable Enable	00 01*
Code ID setting  1104	00-FF <sub>16</sub> (ASCII)	00-FF <sub>16</sub> <A>*
Insert group selection  1105	00-66	00-66 00*
Supplement digits  1106	None 2 digits 5 digits 2 or 5 digits	00* 01 02 03
Truncation/Expansion  1107	None Truncate leading zeros Expand to EAN-13	00* 01 02
Reserved  1108		

 %%%END END

# UPC-E

Read: Format

Leading zero	Data digits (6 digits)	Check digits
--------------	------------------------	--------------

**Check digit verification:** The check digit is optional and made as the sum of the numerical value of the data digits.

**Check digit trans.:** By setting Enable, check digit will be transmitted.

**Code ID setting:** Refer to **Code ID setting** of UPC-A.

**Insertion group selection:** Refer to **Insertion group selection** of UPC-A.

**Supplement digits:**

Format

Leading zero	Data digits (6 digits)	Check digit	Supplement digits 2 or 5
--------------	------------------------	-------------	--------------------------

**Truncation/Expansion:**

**Truncate leading zeros-** Refer to **Truncation/Expansion** of UPC-A.









**Expand to EAN-13-** It extends to 13-digits with "0" digits when the feature is set to be enabled.

Example: Barcode "0123654",

Output: "0012360000057".

**Expand to UPC-A-** It extends to 12-digits when the feature is set to be enabled.

 %SETUP SETUP

Option bar code	Option	Alpha. entry
Read  1201	Disable Enable	00 01*
Check digit verification  1202	Disable Enable	00 01*
Check digit trans.  1203	Disable Enable	00 01*
Code ID setting  1204	00-FF <sub>16</sub> (ASCII)	00-FF <sub>16</sub> <D>*
Insert group selection  1205	00-66	00-66 00*
Supplement digits  1206	None 2 digits 5 digits 2 or 5 digits	00* 01 02 03
Truncation/Expansion  1207	None Truncate leading zeros Expand to EAN-13 Expand to UPC-A	00* 01 02 03
Reserved  1208		

 %%%END END

## EAN-13

**Read:**

Format

Data digits (12 digits)	Check digit
-------------------------	-------------

**Check digit verification:** The check digit is optional and made as the sum of the numerical value of the data digits.

**Check digit transmission:** By setting Enable, check digit will be transmitted.

**Code ID setting:** Refer to **Code ID setting** of UPC-A.

**Insertion group selection:** Refer to **Insertion group selection** of UPC-A.

**Supplement digits:**

Format

Data digits (12 digits)	Check digit	Supplement digits 2 or 5
-------------------------	-------------	--------------------------









**ISBN/ISSN:** The ISBN (International Standard Book Number) and ISSN (International Standard Serial Number) are two kinds of barcode for books and magazines. The ISBN is 10 digits with leading “978” and the ISSN is 8 digits with leading “977” of the EAN-13 symbology.

Example:

Barcode “9780194315104”, Output: “019431510X”.

Barcode “9771005180004”, Output: “10051805”.



Option bar code	Option	Alpha. entry
Read  1301	Disable Enable	00 01*
Check digit verification  1302	Disable Enable	00 01*
Check digit transmission  1303	Disable Enable	00 01*
Code ID setting  1304	00-FF <sub>16</sub> (ASCII)	00-FF <sub>16</sub> <A>*
Insert group selection  1305	00-66	00-66 00*
Supplement digits  1306	None 2 digits 5 digits 2 or 5 digits	00* 01 02 03
ISBN/ISSN conversion  1307	Disable Enable	00* 01
Reserved  1308		





## EAN-8

Read:

Format

Data digits (7 digits)	Check digit
------------------------	-------------

**Check digit verification:** The check digit is optional and made as the sum of the numerical value of the data digits.

**Check digit trans.:** By setting Enable, check digit will be transmitted.

**Code ID setting:** Refer to **Code ID setting** of UPC-A.

**Insertion group selection:** Refer to **Insertion group selection** of UPC-A.









**Supplement digits:**

Format

Data digits (7 digits)	Check digit	Supplement Digits 2 or 5
------------------------	-------------	--------------------------

**Truncation/Expansion:** Refer to **Truncation/Expansion** of UPC-A.

 %SETUP SETUP

Option bar code	Option	Alpha. entry
Read  1401	Disable Enable	00 01*
Check digit verification  1402	Disable Enable	00 01*
Check digit trans.  1403	Disable Enable	00 01*
Code ID setting  1404	00-FF <sub>16</sub> (ASCII)	00-FF <sub>16</sub> <A>*
Insert group selection  1405	00-66	00-66 00*
Supplement digits  1406	None 2 digits 5 digits 2 or 5 digits	00* 01 02 03
Truncation/Expansion  1407	None Truncate leading zero Expand to EAN-13	00* 01 02
Reserved  1408		

 %%%END END

## Code 39

### Read:

#### Format

★	Data digits (variable)	Check digit (optional)	★
---	------------------------	------------------------	---

**Check digit verification:** The check digit is optional and made as the sum module 43 of the numerical value of the data digits.

**Check digit transmission:** By setting Enable, check digit will be transmitted.

**Max./Min. code length:** Each symbology has own max./min. code length. If both setting of max./min. code length are "00"s, the setting of global max./min. code length is effective. The length is defined as to the actual barcode data length to be sent. Label with length exceeds these limits will be rejected. Make sure that the minimum length setting is no greater than the maximum length setting, or otherwise all the labels of the symbology will not be readable. In particular, you can see the same value for both minimum and maximum reading length to force the fixed length barcode decoded.

**Code ID setting:** Refer to [Code ID setting](#) of UPC-A.

**Insertion group selection:** Refer to [Insertion group selection](#) of UPC-A.

**Start/End transmission:** The start and end characters of Code 39 are "★"s. You can transmit all data digits including two "★"s.

**"★" as data character:** By setting Enable, "★" can be recognized as data character.

**Convert Code 39 to Code 32:** Code 32 is a variant of Code 39 used by the Italian pharmaceutical industry. Note that Code 39 must be enabled in order for this parameter to function.

#### Format of Code 32

"A" (optional)	Data digits (8 digits)	Check digit
----------------	------------------------	-------------

**Code 32 Prefix "A" transmission:** By setting Enable, the prefix character "A" can be added to all Code 32 barcodes.








 
 
 

 


**Trioptic Code 39 read:** Trioptic Code 39 is a variant of Code 39 used in the marking of magnetic tapes and computer cartridges. Trioptic Code 39 symbols always contain six characters.

#### Format

\$	Data digits (6 digits)	\$
----	------------------------	----

**Trioptic Code 39 Start/End transmission:** The start and end characters of Trioptic Code 39 are "\$"s. You can transmit all data digits including two "\$"s.

 %SETUP SETUP

Option bar code	Option	Alpha. entry
Read  1501	Disable Enable	00 01*
Check digit verification  1502	Disable Enable	00* 01
Check digit transmission  1503	Disable Enable	00* 01
Max. code length  1504	00-99	00-99 00*
Min. code length  1505	00-99	00-99 01*
Code ID setting  1506	00-FF <sub>16</sub> (ASCII)	00-FF <sub>16</sub> <M>*
Insert group selection  1507	00-66	00-66 00*
Format  1508	Standard Full ASCII	00* 01
Start/End transmission  1509	Disable Enable	00* 01
“★” as data character  1510	Disable Enable	00* 01
Convert Code 39 to Code 32  1511	Disable Enable	00* 01
Code 32 Prefix “A” transmission  1512	Disable Enable	00* 01
Trioptic Code 39 read  1513	Disable Enable	00 01*
Trioptic Code 39 Start/End transmission  1514	Disable Enable	00* 01

 %%%END END

## Interleaved 2 of 5

Read:

Format

Data digits (Variable)	Check digit (optional)
------------------------	------------------------

**Check digit verification:** The check digit is made as the sum module 10 of the numerical values of all data digits. There are two optional check digit algorithms: the specified Uniform Symbology Specification (USS) and the Optical Product Code Council (OPCC).

**Check digit transmission:** By setting Enable, check digit will be transmitted.

**Max./Min. code length:** Refer to Max./Min. code length of Code 39.

**Code ID setting:** Refer to Code ID setting of UPC-A.

**Insertion group selection:** Refer to Insertion group selection of UPC-A.

|||||  
%SETUP SETUP

Option bar code	Option	Alpha. entry
Read       1601	Disable Enable	00 01*
Check digit verification       1602	Disable USS OPCC	00* 01 02
Check digit transmission       1603	Disable Enable	00* 01
Max. code length       1604	00-99	00-99 00*
Min. code length       1605	00-99	00-99 06*
Code ID setting       1606	00-FF <sub>16</sub> (ASCII)	00-FF <sub>16</sub> < >*
Insert group selection       1607	00-66	00-66 00*
Reserved       1608		

|||||  
%%%END END

## Industrial 2 of 5

Read:

Format







Data digits (variable)	Check digit (optional)
------------------------	------------------------

Max./Min. code length: Refer to Max./Min. code length of Code 39.

Code ID setting: Refer to Code ID setting of UPC-A.

Insertion group selection: Refer to Insertion group selection of UPC-A.

 %SETUP SETUP

Option bar code	Option	Alpha. entry
Read  1701	Disable Enable	00* 01
Max. code length  1702	00-99	00-99 00*
Min. code length  1703	00-99	00-99 00*
Code ID setting  1704	00-FF <sub>16</sub> (ASCII)	00-FF <sub>16</sub> <H>*
Insert group selection  1705	00-66	00-66 00*
Reserved  1706		

 %%%END END

## Matrix 2 of 5

Read:

Format

Data digits (variable)	Check digit (optional)
------------------------	------------------------

**Check digit verification:** The check digit is made as the sum module 10 of the numerical values of all data digits.

**Check digit transmission:** By setting Enable, check digit will be transmitted.

**Max./Min. code length:** Refer to Max./Min. code length of Code 39.

**Code ID setting:** Refer to Code ID setting of UPC-A.

**Insertion group selection:** Refer to Insertion group selection of UPC-A.

||||| %SETUP SETUP

Option bar code	Option	Alpha. entry
Read       1801	Disable Enable	00 01*
Check digit verification       1802	Disable Enable	00* 01
Check digit transmission       1803	Disable Enable	00* 01
Max. code length       1804	00-99	00-99 00*
Min. code length       1805	00-99	00-99 06*
Code ID setting       1806	00-FF <sub>16</sub> (ASCII)	00-FF <sub>16</sub> <X>*
Insert group selection       1807	00-44	00-44 00*
Reserved       1808		

||||| %%%END END

# Codabar

Read:

Format

Start	Data digits (variable)	Check digit (optional)	End
-------	------------------------	------------------------	-----

**Check digit verification:** The check digit is made as the sum module 16 of the numerical values of all data digits.

**Check digit transmission:** By setting Enable, check digit will be transmitted.

**Max./Min. code length:** Refer to Max./Min. code length of Code 39.

**Code ID setting:** Refer to Code ID setting of UPC-A.




 

 
 
**Insertion group selection:** Refer to Insertion group selection of UPC-A.

**Start/End type:** Codabar has four pairs of Start/End pattern; you may select one pair to match your application.

**Start/End transmission:** Refer to Start/End transmission of Code 39.

**Start/End character equality:** By setting Enable, the start and end character of a Codabar barcode must be the same.

 %SETUP SETUP

Option bar code	Option	Alpha. entry
Read  1901	Disable Enable	00 01*
Check digit verification  1902	Disable Enable	00* 01
Check digit transmission  1903	Disable Enable	00* 01
Max. code length  1904	00-99	00-99 00*
Min. code length  1905	00-99	00-99 00*
Code ID setting  1906	00-FF <sub>16</sub> (ASCII)	00-FF <sub>16</sub> <N>*
Insert group selection  1907	00-66	00-66 00*
Start/End type  1908	ABCD/ABCD abcd/abcd ABCD/TN*E abcd/tn*e	00* 01 02 03
Start/End transmission  1909	Disable Enable	00* 01
Start/End character equality  1910	Disable Enable	00* 01

 %%%END END

## Code 128

Read:

Format

Data digits (variable)	Check digit (optional)
------------------------	------------------------

**Check digit verification:** The check digit is made as the sum module 103 of all data digits.

**Check digit transmission:** By setting Enable, check digit will be transmitted.

**Max./Min. code length:** Refer to Max./Min. code length of Code 39.

**Code ID setting:** Refer to Code ID setting of UPC-A.

**Insertion group selection:** Refer to Insertion group selection of UPC-A.

**Truncate leading zeros:** The leading "0" digits of Code 128 barcode characters can be truncated when the feature is enabled.

||||| %SETUP ||||| SETUP

Option bar code	Option	Alpha. entry
Read       2001	Disable Enable	00 01*
Check digit verification       2002	Disable Enable	00 01*
Check digit transmission       2003	Disable Reserved	00* 01
Max. code length       2004	00-99	00-99 00*
Min. code length       2005	00-99	00-99 01*
Code ID setting       2006	00-FF <sub>16</sub> (ASCII)	00-FF <sub>16</sub> <K>*
Insert group selection       2007	00-66	00-66 00*
Truncate leading zeros       2008	Disable All leading "0"s Only the first "0"	00* 01 02

||||| %%%END ||||| END



## Code 93

Read:

Format

Data digits (variable)	2 check digits (optional)
------------------------	---------------------------

**Check digit verification:** The check digit is made as the sum module 47 of the numerical values of all data digits.








 
**Check digit transmission:** By setting Enable, check digit will be transmitted.

**Max./Min. code length:** Refer to Max./Min. code length of Code 39.

**Code ID setting:** Refer to Code ID setting of UPC-A.

**Insertion group selection:** Refer to Insertion group selection of UPC-A.

 %SETUP SETUP

Option bar code	Option	Alpha. entry
Read  2101	Disable Enable	00 01*
Check digit verification  2102	Disable Enable	00 01*
Check digit transmission  2103	Disable Enable	00* 01
Max. code length  2104	00-99	00-99 00*
Min. code length  2105	00-99	00-99 01*
Code ID setting  2106	00-FF <sub>16</sub> (ASCII)	00-FF <sub>16</sub> <L>*
Insert group selection  2107	00-66	00-66 00*
Reserved  2108		

 %%%END END

## Code 11

Read:

Format

Data digits (variable)	Check digit 1 (optional )	Check digit 2 (optional)
------------------------	---------------------------	--------------------------

**Check digit verification:** The check digit is presented as the sum module 11 of all data digits.









**Check digit transmission:** By setting Enable, check digit 1 and check digit 2 will be transmitted upon your selected check digit verification method.

**Max./Min. code length:** Refer to Max./Min. code length of Code 39.

**Code ID setting:** Refer to Code ID setting of UPC-A.

**Insertion group selection:** Refer to Insertion group selection of UPC-A.

 %SETUP SETUP

Option bar code	Option	Alpha. entry
Read  2201	Disable Enable	00* 01
Check digit verification  2202	Disable One digit Reserved Reserved	00 01* 02 03
Check digit transmission  2203	Disable Enable	00* 01
Max. code length  2204	00-99	00-99 00*
Min. code length  2205	00-99	00-99 00*
Code ID setting  2206	00-FF <sub>16</sub> (ASCII)	00-FF <sub>16</sub> <V>*
Insert group selection  2207	00-66	00-66 00*
Reserved  2208		

 %%%END END

## MSI/Plessey

Read:

Format

Data digits (variable)	Check digit 1 (optional)	Check digit 2 (optional)
------------------------	--------------------------	--------------------------











**Check digit verification:** The MSI/Plessey has one or two optional check digits. There are three methods of verifying check digits, i.e. Mod10, Mod10/10 and Mod 11/10. The check digit 1 and check digit 2 will be calculated as the sum module 10 or 11 of the data digits.

**Check digit transmission:** By setting Enable, check digit 1 and check digit 2 will be transmitted upon your selected check digit verification method.

**Max./Min. code length:** Refer to Max./Min. code length of Code 39.

**Code ID setting:** Refer to Code ID setting of UPC-A.

**Insertion group selection:** Refer to Insertion group selection of UPC-A.

 %SETUP			SETUP
Option bar code	Option	Alpha. entry	
Read  2301	Disable	00*	
	Enable	01	
Check digit verification  2302	Disable	00*	
	1 digit (mod 10)	01	
	Reserved	02	
	Reserved	03	
Check digit transmission  2303	Disable	00*	
	Enable	01	
Max. code length  2304	00-99	00-99	
		00*	
Min. code length  2305	00-99	00-99	
		00*	
Code ID setting  2306	00-FF <sub>16</sub> (ASCII)	00-FF <sub>16</sub> <O>*	
Insert group selection  2307	00-66	00-66	
		00*	
Reserved  2308			
 %%%END			END

## UK/Plessey

Read:

Format

Data digits (variable)	2 check digits (optional)
------------------------	---------------------------

**Check digit verification:** The UK/Plessey has one or two optional check digits. The check digit 1 and check digit 2 will be calculated as the sum module 10 or 11 of the data digits.



 

 
 
 
 
**Check digit transmission:** By setting Enable, check digit will be transmitted.

**Max./Min. code length:** Refer to Max./Min. code length of Code 39.

**Code ID setting:** Refer to Code ID setting of UPC-A.

**Insertion group selection:** Refer to Insertion group selection of UPC-A.

 %SETUP SETUP

Option bar code	Option	Alpha. entry
Read  2401	Disable Enable	00* 01
Check digit verification  2402	Disable Enable	00 01*
Check digit transmission  2403	Disable Enable	00* 01
Max. code length  2404	00-99	00-99 00*
Min. code length  2405	00-99	00-99 01*
Code ID setting  2406	00-FF <sub>16</sub> (ASCII)	00-FF <sub>16</sub> <U>*
Insert group selection  2407	00-66	00-66 00*
Reserved  2408		

 %%%END END

## UCC/EAN 128

Read:

Format

Data digits (variable)	Check digit (optional)
------------------------	------------------------

**Check digit verification:** The check digit is made as the sum module 103 of all data digits.

**Check digit transmission:** By setting Enable, check digit will be transmitted.









**Max. /Min. code length:** Refer to Max./Min. code length of Code 39.

**Code ID setting:** Refer to Code ID setting of UPC-A.

**Insertion group selection:** Refer to Insertion group selection of UPC-A.

**Truncate leading zeros:** Refer to Truncate leading zeros of Code 128.

 %SETUP SETUP

Option bar code	Option	Alpha. entry
Read  2501	Disable Enable	00 01*
Check digit verification  2502	Disable Enable	00 01*
Check digit transmission  2503	Disable Reserved	00* 01
Max. code length  2504	00-99	00-99 00*
Min. code length  2505	00-99	00-99 01*
Code ID setting  2506	00-FF <sub>16</sub> (ASCII)	00-FF <sub>16</sub> <K>*
Insert group selection  2507	00-66	00-66 00*
Truncate leading zeros  2508	Disable All leading "0"s Only the first "0"	00* 01 02

 %%%END END

## China Post

Read:





 
 
 
 
Format

11 Data digits

**Code ID setting:** Refer to Code ID setting of UPC-A.

**Insertion group selection:** Refer to Insertion group selection of UPC-A.

 %SETUP SETUP

Option bar code	Option	Alpha. entry
Read  2601	Disable Enable	00 01*
Reserved  2602		
Reserved  2603		
Reserved  2604		
Reserved  2605		
Code ID setting  2606	00-FF <sub>16</sub> (ASCII)	00-FF <sub>16</sub> <T>*
Insert group selection  2607	00-66	00-66 00*
Reserved  2608		

 %%%END END

## GS1 DataBar (GS1 DataBar Truncated)

GS1 DataBar Truncated is structured and encoded the same as the standard GS1 DataBar format, except its height is reduced to a 13 modules minimum; while GS1 DataBar should have a height greater than or equal to 33 modules.

**Read:**

Format

16 Data digits








**Code ID setting:** Refer to **Code ID setting** of UPC-A.

**Insertion group selection:** Refer to **Insertion group selection** of UPC-A.

**Conversion:**

**UCC/EAN 128-** Refer to **Code ID transmission** of String transmission, ]Cm will be identified as AIM ID.

**UPC-A or EAN-13-** Barcode beginning with a single zero as the first digit has the leading “010” stripped and the barcode reported as EAN-13. Barcode beginning with two or more zeros but not six zeros has the leading “0100” stripped and the barcode reported as UPC-A.

 <b>%SETUP</b>			SETUP
Option bar code	Option	Alpha. entry	
Read  <b>2701</b>	Disable	00	
	Enable	01*	
Code ID setting  <b>2702</b>	00-FF <sub>16</sub> (ASCII)	00-FF <sub>16</sub> <R >*	
Insert group selection  <b>2703</b>	00-66	00-66 00*	
Conversion  <b>2704</b>	None	00*	
	UCC/EAN 128	01	
	UPC-A or EAN-13	02	
Reserved  <b>2705</b>			
 <b>%%%END</b>			END

# GS1 DataBar Limited

Read:

Format






16 Data digits

**Code ID setting:** Refer to **Code ID setting** of UPC-A.

**Insertion group selection:** Refer to **Insertion group selection** of UPC-A.

**Conversion:** Refer to **Conversion** of GS1 DataBar (GS1 DataBar Truncated).

 %SETUP SETUP

Option bar code	Option	Alpha. entry
Read  <b>2801</b>	Disable Enable	00 01*
Code ID setting  <b>2802</b>	00-FF <sub>16</sub> (ASCII)	00-FF <sub>16</sub> <R >*
Insert group selection  <b>2803</b>	00-66	00-66 00*
Conversion  <b>2804</b>	None UCC/EAN 128 UPC-A or EAN-13	00* 01 02
Reserved  <b>2805</b>		

 %%%END END



## GS1 DataBar Expanded

Read:

Format










Data characters (variable)

**Code ID setting:** Refer to Code ID setting of UPC-A.

**Insertion group selection:** Refer to Insertion group selection of UPC-A.

**Conversion:**

**UCC/EAN 128-** Refer to Code ID transmission of String transmission, ]Cm will be identified as AIM ID.

 <b>%SETUP</b>			SETUP
Option bar code	Option	Alpha. entry	
Read  <b>2901</b>	Disable	00	
	Enable	01*	
Max. code length  <b>2902</b>	00-99	00-99	
		00*	
Min. code length  <b>2903</b>	00-99	00-99	
		01*	
Code ID setting  <b>2904</b>	00-FF <sub>16</sub> (ASCII)	00-FF <sub>16</sub> <R >*	
Insert group selection  <b>2905</b>	00-66	00-66	
		00*	
Conversion  <b>2906</b>	None	00*	
	UCC/EAN 128	01	
Reserved  <b>2907</b>			
 <b>%%END</b>			END

## PDF417

This decoder is only applied with a specified firmware.

The symbol size in the standard of PDF417 says, number of rows: 3 to 90, and number of columns: 1 to 30. This scanner can only decode PDF417 at rows from 3 to 40 and columns from 1 to 20.

The error correction level for a PDF417 symbol is from 0 to 8. This scanner can only support the levels from 0 to 6.


**Read:**







Format


Data characters (variable)

**Code ID setting:** Refer to Code ID setting of UPC-A.

**Insertion group selection:** Refer to Insertion group selection of UPC-A.

 %SETUP      SETUP

Option bar code	Option	Alpha. entry
Read  3001	Disable Enable	00* 01
Max. code length  3002	00-99	00-99 00*
Min. code length  3003	00-99	00-99 01*
Code ID setting  3004	00-FF <sub>16</sub> (ASCII)	00-FF <sub>16</sub> <P>*
Insert group selection  3005	00-66	00-66 00*
Reserved  3006		

 %%%END      END

## MicroPDF417

This decoder is only applied with a specified firmware.

**Read:**

Format





 

 
Data characters (variable)

**Max. /Min. code length:** Refer to Max./Min. code length of Code 39.

**Code ID setting:** Refer to Code ID setting of UPC-A.

**Insertion group selection:** Refer to Insertion group selection of UPC-A.

 %SETUP SETUP

Option bar code	Option	Alpha. entry
Read  3101	Disable Enable	00* 01
Max. code length  3102	00-99	00-99 00*
Min. code length  3103	00-99	00-99 01*
Code ID setting  3104	00-FF <sub>16</sub> (ASCII)	00-FF <sub>16</sub> <P>*
Insert group selection  3105	00-66	00-66 00*
Reserved  3106		
Reserved  3107		

 %%%END END

## China Finance

*Note: This type of barcode is not Omni-directionally decodable. The encodable character set includes numeric 0 to 9. Among the symbol of 0 to 9, 0 and 2, 4 and 9, 5 and 8, 6 and 7, have the symmetrical pattern; the pattern of 1 and 3 is symmetrical.*

### Read:

Format

10 Data digits

**Max./Min. code length:** Refer to Max./Min. code length of Code 39.

**Check digit verification:** The check digit is made as the sum module 10 of the numerical values of all data digits.









**Leading character 5/6/7/8/9 converted to A/B/C/D/E:** By setting, leading character 5/6/7/8/9 can be converted to A/B/C/D/E.

**Leading character assignment:** By setting, only the barcode with the assigned leading character can be output.

**Code ID setting:** Refer to Code ID setting of UPC-A.

**Insertion group selection:** Refer to Insertion group selection of UPC-A.

 %SETUP SETUP

Option bar code	Option	Alpha. entry
Read  3201	Disable Enable	00 01*
Max. code length  3202	00-99	00-99 10*
Min. code length  3203	00-99	00-99 10*
Check digit verification  3204	Disable Reserved	00* 01
Leading character 5/6/7/8/9 converted to A/B/C/D/E  3205	Disable Enable Only 5 converted to A Only 6 converted to B Only 7 converted to C Only 8 converted to D Only 9 converted to E	00 01* 02 03 04 05 06
Leading character assignment  3206	Disable Assigned to 0 Assigned to 5(A) Assigned to 6(B) Assigned to 7(C) Assigned to 8(D) Assigned to 9(E) Assigned to 1 Assigned to 2 Assigned to 3 Assigned to 4	00 01* 02 03 04 05 06 07 08 09 10
Code ID setting  3207	00-FF <sub>16</sub> (ASCII)	00-FF <sub>16</sub> <Y>*
Insert group selection  3208	00-66	00-66 00*

 %%%END END

  
%%LLDS

**Laser Light Direction Setting:** By scanning the barcode above, the decoding direction of the scanner's laser light is from left to right. By scanning the up-side-down barcode above, the decoding direction of the scanner's laser light is from right to left.

## G1-G6 & FN1 substitution string setting

### Format of barcode data transmission

Prefix	Code name	Preamble	Code ID	Code length	Code data	Code ID	Postamble	Suffix
--------	-----------	----------	---------	-------------	-----------	---------	-----------	--------

**Suffix string setting:** The <enter> key is represented in different ASCII when it is applied by different OS. For a Windows/DOS OS, <enter> is represented as <CR><LF> (0x0D 0x0A); for an APPLE MAC OS, <enter> is represented as <CR> (0x0D); for a Linux/Unix OS, <enter> is represented as <LF> (0x0A).

### Prefix/Suffix string setting: & Preamble/Postamble string setting:


They are appended to the data automatically when a barcode is decoded.

Example: Add a symbol of “\$” as a prefix for all symbologies.

Steps:

- 1) Scan **SETUP** and **Prefix string setting** barcode.
- 2) Use the ASCII table to find the value of \$→24.
- 3) Scan **2** and **4** from the barcode on the foldout back page.
- 4) Scan **END** barcode.

Scanning steps: Scan the following barcodes in order.

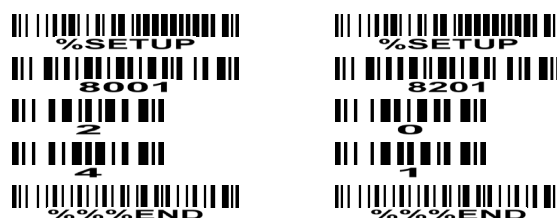

**Insert G1/G2/G3/G4 string setting:** The scanner offers 4 positions and 4 character strings to insert among the symbol.

Example: Set G1 string to be “AB”.

Original code data	“1 2 3 4 5 6”
Output code data	“1 2 A B 3 4 5 6”

Steps:

- 1) Scan **SETUP** and **Insert G1 string setting** barcode.
- 2) Use the ASCII table to find the value of A→41, B→42.
- 3) Scan **4**, **1** and **4**, **2** from the barcode on the foldout back page.
- 4) Scan **END** barcode.
- 5) Refer to the chapter of G1-G4 string position & Code ID position.
- 6) Refer to the chapter of Hand-held scan & some global settings.



Testing barcode:



**FN1 substitution string setting:** The FN1 character (0x1D) in an UCC/EAN128 barcode, or a Code 128 barcode, or a GS1 DataBar barcode can be substituted with a defined string.



**Truncate leading G5 string setting:** By setting, a defined leading character or string can be truncated. Also a single character can be un-defined.

**Repeat of a G5 character setting:** While G5 is set as a single defined/un-defined character, G5 can also be set to be repeated. This setting is ignored when the truncate number is more than the barcode data characters. The option of “FF” for this setting is not active while the option of **Truncate leading G5 string setting** is “00”.

Example: Truncate all leading zeros for all symbologies.

Original code data	“0001 2 3 4 5 6”
Output code data	“1 2 3 4 5 6”

Steps:

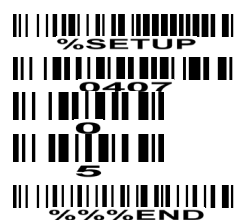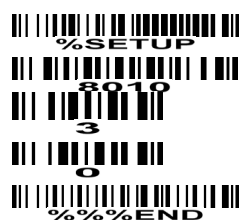

Testing barcode:



**Truncate ending G6 string setting:** By setting, a defined ending character or string can be truncated. Also a single character can be un-defined.


**Repeat of a G6 character setting:** While G5 is set as a single defined/un-defined character, G6 can also be set to be repeated. This setting is ignored when the truncate number is more than the barcode data characters. The option of “FF” for this setting is not active while the option of **Truncate ending G6 string setting** is “00”.

**Single character C1/C2 replacement:** By setting, a defined character in the data string can be replaced by another defined character. The C1 and C2 replacement are applied simultaneously.

Example: Replace all the “A” character in a data string to be “B” character.

Original code data	“1 2 3 A 5 A”
Output code data	“1 2 3 B 5 B”



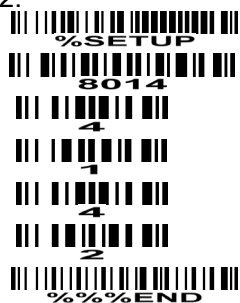






 
 




Steps: scan the following barcodes in order. The ASCII value for “A” is 41, and the ASCII value for “B” is 42.



Testing barcode:



  %SETUP SETUP

Option bar code	Option	Alpha. entry
Prefix string setting  8001	0-22 characters None	00-FF <sub>16</sub> 00*
Suffix string setting  8002	0-22 characters <ENTER>	00-FF <sub>16</sub> 0A0D*
Preamble string setting  8003	0-22 characters None	00-FF <sub>16</sub> 00*
Postamble string setting  8004	0-22 characters None	00-FF <sub>16</sub> 00*
Insert G1 string setting  8005	0-22 characters None	00-FF <sub>16</sub> 00*
Insert G2 string setting  8006	0-22 characters None	00-FF <sub>16</sub> 00*
Insert G3 string setting  8007	0-22 characters None	00-FF <sub>16</sub> 00*
Insert G4 string setting  8008	0-22 characters None	00-FF <sub>16</sub> 00*
FN1 substitution string setting  8009	0-4 characters <SP>	00-FF <sub>16</sub> 20*
Truncate leading G5 string setting  8010	A un-defined character 1-22 defined characters <0>	00 01-7F <sub>16</sub> 30*
Repeat of a G5 character setting  8011	Once Defined times Un-defined times (All)	01* 01-22 FF
Truncate ending G6 string setting  8012	A un-defined character 1-22 defined characters <0>	00 01-7F <sub>16</sub> 30*
Repeat of a G6 character setting  8013	Once Defined times Un-defined times (All)	01* 01-22 FF
Single character C1 replacement  8014	<0000>	0000* 0000-FFFF <sub>16</sub>
Single character C2 replacement  8015	<0000>	0000* 0000-FFFF <sub>16</sub>

 %%%END END



## G1-G4 string position & Code ID position

### Format of barcode data transmission

Prefix	Code name	Preamble	Code ID	Code length	Code data	Code ID	Postamble	Suffix
--------	-----------	----------	---------	-------------	-----------	---------	-----------	--------

**Insert G1/G2/G3/G4 string position:** The scanner offers 4 positions to insert strings among the symbol. In case of the insertion position is greater than the length of the symbol, the insertion of string is not effective.

**Code ID position:** It is allowed to select different positions of code ID placement.



Option bar code	Option	Alpha. entry
Insert G1 string position  8101	00-99	00-99 00*
Insert G2 string position  8102	00-99	00-99 00*
Insert G3 string position  8103	00-99	00-99 00*
Insert G4 string position  8104	00-99	00-99 00*
Code ID position  8105	Before code data After code data	00* 01
Reserved  8106		
Reserved  8107		



## String transmission

*Note: The information in this chapter is closely related to the chapter of String setting.*

### Format of barcode data transmission

Prefix	Code name	Preamble	Code ID	Code length	Code data	Code ID	Postamble	Suffix
--------	-----------	----------	---------	-------------	-----------	---------	-----------	--------

**Preamble transmission:** By setting Enable, preamble will be appended before the data transmitted.

**Postamble transmission:** By setting Enable, postamble will be appended after the data is transmitted.

**Code ID transmission:** Code ID can be transmitted in the format of either Proprietary ID or AIM ID. Refer to the chapter of Default setting for each barcode.

**Code length transmission:** The length of code data string can be transmitted before the code data when Enable is selected. The length is represented by a number with two digits.

**Code name transmission:** By setting Enable, code name will be transmitted before code data.

**Case conversion:** The characters within code data or the whole output string can be set in either upper case or lower case.

**FN1 substitution transmission:** The scanner supports a FN1 substitution feature for keyboard wedge, USB and RS-232 interface. The replacement string of FN1 can be chosen by user (see chapter of G1-G6 & FN1 substitution string setting).

**All-non-printable-character string transmission with string setting:** By setting enable, all string settings, e.g. Preamble transmission or Insert G1 string setting, are active for an all-non-printable-character string. Here a non-printable character means a character with ASCII value between 0x00 to 0x1F.

|||||  
%SETUP SETUP

Option bar code	Option	Alpha. entry
Prefix transmission           8201	Disable Enable	00* 01
Suffix transmission           8202	Disable Enable	00 01*
Code name transmission           8203	Disable Enable	00* 01
Preamble transmission           8204	Disable Enable	00* 01
Postamble transmission           8205	Disable Enable	00* 01
Code ID transmission           8206	Disable Proprietary ID AIM ID	00* 01 02
Code length transmission           8207	Disable Enable	00* 01
Case conversion           8208	Disable Upper (data only) Lower (data only) Upper (whole string) Lower (whole string)	00* 01 02 03 04
FN1 substitution transmission           8209	Disable Keyboard wedge/USB RS-232 Keyboard wedge/USB/RS-232	00* 01 02 03
All-non-printable-character string transmission with string setting           8210	Disable Enable	00* 01

|||||  
%%%END END

## Test Chart

UPC-A
6 59871 23231 9
UPC-E
0 232310 7
EAN-8
0123 4510
EAN-13
1 234567 891019
Code 39
*0189-.\$AZ*
Code 32
A908765439
Code 128
01AZ[+*/]za98
Interleaved 2 of 5
0123456789
Industrial 2 of 5
(Default setting: Read disable)
0123456789
Matrix 2 of 5
9876543210
Code 93
01AZ+/*az89
UCC/EAN 128
01AZ[]+az54
Code 11
(Default setting: Read disable)
123456789-0

## Test Chart (Continued)

MSI/Plessey

(Default setting: Read disable)



0123456789

UK/Plessey



01ABEF89

ISBN/ISSN



9 780194 315104

China Post



54 7896321 45

GS1 DataBar (GS1 DataBar Truncated)



1234567890123

GS1 DataBar Limited



987654321012

GS1 DataBar Expanded



Ab\_09+yZ

PDF417



01Az+--=

MicroPDF417



23+-mdo

## Troubleshooting

Problem	Possible causes	Possible solutions
Nothing happens when you follow the operating instructions, or the scanner displays erratic behavior.	No power to the scanner.	Check the system power. Ensure the power supply is connected.
	Incorrect cables.	Use the original cables.
	Connections are loose.	Check for loose cable connections.
Laser comes on, but the scanner does not decode.	Bar code symbol is unreadable.	Check the symbol to make sure it is not defaced. Try scanning test symbols of the same bar code type.
	Scanner is not programmed for the correct bar code type.	Be sure the scanner is programmed to read the type of bar code you are scanning.
	Distance between scanner and bar code is incorrect.	Move the scanner closer to or further from the bar code.
Scanned data is incorrectly displayed on the host.	Scanner is not programmed to work with the host. Check scanner host type parameters or editing options.	Be sure proper host is selected. For RS-232, ensure the scanner's communication parameters match the host's settings.
Other circumstances.		Contact your distributor or the manufactory support centre.

## Maintenance

Cleaning the exit window is the only maintenance required. A dirty window may affect scanning accuracy.

1. Do not allow any abrasive material to touch the window.
2. Remove any dirt particles with a damp cloth.
3. Wipe the window using a tissue moistened with water.
4. Do not spray water or other cleaning liquids directly into the window.
5. Use a piece of soft and dry cloth when cleaning the scanner.

## ASCII table

	for keyboard wedge		for RS-232	
H L	0	1	0	1
0	Null		NUL	DLE
1	Up	F1	SOH	DC1
2	Down	F2	STX	DC2
3	Left	F3	ETX	DC3
4	Right	F4	EOT	DC4
5	PgUp	F5	ENQ	NAK
6	PgDn	F6	ACK	SYN
7		F7	BEL	ETB
8	Bs	F8	BS	CAN
9	Tab	F9	HT	EM
A		F10	LF	SUB
B	Home	Esc	VT	ESC
C	End	F11	FF	FS
D	Enter	F12	CR	GS
E	Insert	Ctrl+	SO	RS
F	Delete	Alt+	SI	US

Notes: The 2nd and the 3rd columns above are used for keyboard wedge only.

H L	2	3	4	5	6	7
0	SP	0	@	P	`	p
1	!	1	A	Q	a	q
2	“	2	B	R	b	r
3	#	3	C	S	c	s
4	\$	4	D	T	d	t
5	%	5	E	U	e	u
6	&	6	F	V	f	v
7	‘	7	G	W	g	w
8	(	8	H	X	h	x
9	)	9	I	Y	i	y
A	*	:	J	Z	j	z
B	+	;	K	[	k	{
C	,	<	L	\	l	
D	-	=	M	]	m	}
E	.	>	N	^	n	~
F	/	?	O	_	o	DEL

Example: ASCII “A” = “41”.



## Barcode representing non-printable character

Notes to make the following barcode:

1. According to different barcode printing software, the method of printing following barcode is different.
2. If using CODESOFT software, firstly read the information through “Help→Index→Code128→Special input syntax”. Also refer to ASCII table. For example, if we wish to make “F1” barcode, select “code128”, then select “CODE A” type, and input “{DOC1}” as data.



**Up ↑**



**Down ↓**



**Left ←**



**Right →**



**Page Up**



**Page Down**



**Backspace**



**Tab**



**Home**



**End**



**Enter**



**Insert**



**Delete**



**F1**



**F2**



**F3**



**F4**



**F5**



**F6**



**F7**



**F8**



**F9**



**F10**



**Esc**



**F11**



**F12**

## Return default parameters

 
All parameters of handheld unit return to default setting



%%ADEF

**WARNING:** If you wish to return all parameters of the handheld unit, including radio communication setting, to default setting, please scan the barcode above.

All parameters of cradle return to default setting※



%BADEF

**WARNING:** If you wish to return all parameters of the cradle, including radio communication setting, to default setting, please scan the barcode above.

Some parameters of handheld unit return to default setting



%%%DEF

**WARNING:** If you wish to return all parameters of the handheld unit, excluding radio communication setting, to default setting, please scan the barcode above.

Some parameters of cradle return default value initialization※




%%BDEF

**WARNING:** If you wish to return all parameters of the cradle, excluding radio communication setting, to default setting, please scan the barcode above.

Note: The settings indicated with (※) are valid only when the cradle is in **upgrade ready mode**.

### Cradle entering upgrade ready mode

Keep pressing the  button on the cradle, until the blue LED is flashing. Then three LEDs will all be turned ON, this indicates the cradle being upgrade ready mode.

## Display firmware version & radio communication setting

### Cradle firmware version display



**%%BVER**

If you wish to display the firmware version of the cradle, please scan the barcode above.

### Handheld unit firmware version display



**%%%VER**

If you wish to display the firmware version of the handheld unit, please scan the barcode above.

### Cradle radio communication setting display ✖



**%%BSCI**

If you wish to display the radio communication setting of the cradle, please scan the barcode above.

### Handheld unit radio communication setting display ✖




**%%%SCI**

If you wish to display the radio communication setting of the handheld unit, please scan the barcode above.

Note: The settings indicated with (✖) are valid only when the cradle is in **upgrade ready mode**.



### Cradle entering upgrade ready mode

Keep pressing the  button on the cradle, until the blue LED is flashing. Then three LEDs will all be turned ON, this indicates the cradle being upgrade ready mode.

## Quick setting to point or distributed coordination wireless network



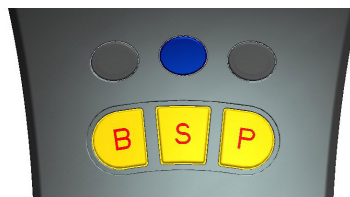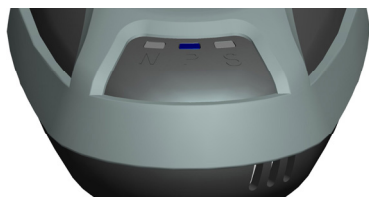

The steps of setting are:

1. Both the handheld unit and the cradle are in normal working mode. Normally it means that only the blue LED on the handheld unit and only the blue LED on the cradle are ON as shown below.




The scanner offers two kinds of wireless network topology: point coordination and distributed coordination. Note that the current applied wireless network topology of the handheld unit or the cradle does NOT make any difference in the following setting.

2. Scan ONE of the following setting barcodes. Other radio parameters include channel no., address, etc.





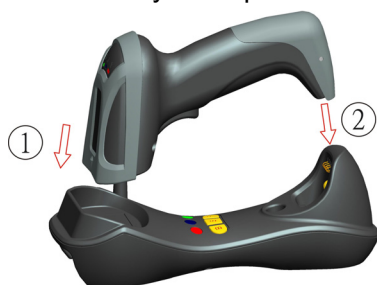











<b>Set to point coordination network without changing other radio parameters</b>  <b>%2PNET</b>
<b>Set to distributed coordination network without changing other radio parameters</b>  <b>%2DNET</b>
<b>Set to point coordination network with returning default radio parameters</b>  <b>2PNET+</b>
<b>Set to distributed coordination network with returning default radio parameters</b>  <b>2DNET+</b>

3. The blue LED on the handheld unit will blink and the beeper will beep regularly to indicate that the handheld unit is ready to be positioned onto the cradle.



4. Firmly position the handheld unit onto the cradle within 15 seconds. A long beep and a short beep will be emitted to indicate a successful setting; otherwise, three short beeps will be emitted to indicate an unsuccessful setting.
5. Referring to the previous chapter of “display firmware version & radio communication setting”, check the current radio communication setting of the handheld unit and the cradle.

Configuration alphanumeric entry barcode

 0	 1
 2	 3
 4	 5
 6	 7
 8	 9
 A	 B
 C	 D
 E	 F